

WAGO-I/O-SYSTEM 750

Manual



750-496
8AI 0/4-20mA S.E.
8-Channel Analog Input Module 0/4-20 mA, Single-Ended

Version 1.2.0

© 2017 WAGO Kontakttechnik GmbH & Co. KG
All rights reserved.

WAGO Kontakttechnik GmbH & Co. KG

Hansastraße 27
D-32423 Minden

Phone: +49 (0) 571/8 87 – 0
Fax: +49 (0) 571/8 87 – 1 69
E-Mail: info@wago.com
Web: <http://www.wago.com>

Technical Support

Phone: +49 (0) 571/8 87 – 5 55
Fax: +49 (0) 571/8 87 – 85 55
E-Mail: support@wago.com

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

E-Mail: documentation@wago.com

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally protected by trademark or patent.

Table of Contents

1 Notes about this Documentation.....	6
1.1 Validity of this Documentation.....	6
1.2 Revision History.....	6
1.3 Copyright.....	6
1.4 Symbols.....	7
1.5 Number Notation.....	9
1.6 Font Conventions	9
2 Important Notes	10
2.1 Legal Bases	10
2.1.1 Subject to Changes	10
2.1.2 Personnel Qualifications.....	10
2.1.3 Use of the WAGO-I/O-SYSTEM 750 in Compliance with Underlying Provisions	10
2.1.4 Technical Condition of Specified Devices	11
2.2 Safety Advice (Precautions).....	12
3 Device Description	14
3.1 View	16
3.2 Connectors.....	17
3.2.1 Data Contacts/Internal Bus.....	17
3.2.2 Power Jumper Contacts/Field Supply	18
3.2.3 Push-in CAGE CLAMP® Connectors	20
3.3 Display Elements	21
3.4 Operating Elements	22
3.5 Schematic Diagram	23
3.6 Technical Data	24
3.6.1 Device Data	24
3.6.2 Power Supply.....	24
3.6.3 Communication	24
3.6.4 Inputs	25
3.6.5 Connection Type	25
3.6.6 Climatic Environmental Conditions	26
3.7 Approvals	27
3.8 Standards and Guidelines	29
4 Process Image.....	30
4.1 Overview	31
4.2 Status Bytes	32
4.3 Process Data	33
4.3.1 Overview of Sensor Types	33
4.3.2 Standard Format	33
4.3.2.1 Sensor Type 0 ... 20 mA	33
4.3.2.2 Sensor Type 4 ... 20 mA	34
4.3.2.3 Sensor Type 3.6 ... 21 mA (NAMUR NE43)	35
4.3.3 Special Format.....	36
4.3.3.1 Sensor Type 0 ... 20 mA	36
4.3.3.2 Sensor Type 4 ... 20 mA	37

4.3.3.3	Sensor Type 3.6 ... 21 mA (NAMUR NE43)	38
5	Mounting.....	39
5.1	Mounting Sequence.....	39
5.2	Inserting and Removing Devices	40
5.2.1	Inserting the I/O Module	40
5.2.2	Removing the I/O Module.....	41
6	Connect Devices	42
6.1	Connecting a Conductor to the Push-in CAGE CLAMP®	42
6.2	Connection Example	43
7	Commissioning.....	44
7.1	Parameterization with WAGO-I/O-CHECK	44
7.1.1	Parameterization Dialog	46
7.1.1.1	Title Bar	47
7.1.1.2	Main Menu.....	47
7.1.1.3	Horizontal Tab Menu.....	48
7.1.1.3.1	“File” Tab.....	48
7.1.1.3.1.1	“Open” Menu Item	49
7.1.1.3.1.2	“Save” Menu Item	50
7.1.1.3.2	“Start” Tab	50
7.1.1.3.3	“Connection” Tab	51
7.1.1.4	Vertical Tab Menu.....	52
7.1.1.4.1	“Module settings” Menu Item.....	53
7.1.1.4.2	“Channel settings” Menu Item	54
7.1.1.4.3	“Scaling” Menu Item	56
7.1.1.4.4	“Calibration” Menu Item	59
7.1.1.4.5	“Monitoring” Menu Item	61
7.1.1.4.6	“Information” Menu Item	62
7.1.1.5	Application Area.....	63
7.1.1.6	Status Messages	63
7.1.1.7	Status Bar	65
7.2	Calibrating Measured Values	66
7.2.1	Example of Determining Gain and Offset.....	67
7.3	Scaling Measured Values	68
8	Diagnostics	69
8.1	I/O Module Behavior in the Event of an Error	69
9	Use in Hazardous Environments	71
9.1	Marking Configuration Examples.....	72
9.1.1	Marking for Europe According to ATEX and IEC-Ex	72
9.1.2	Marking for America According to NEC 500	77
9.2	Installation Regulations.....	78
9.2.1	Special Notes Regarding Explosion Protection.....	78
9.2.2	Special Notes Regarding ANSI/ISA Ex	80
10	Appendix.....	81
10.1	Configuration and Parameterization using a GSD File with PROFIBUS DP and PROFINET IO	81
10.1.1	Configuration 8 AI 0(4)-20 mA, S.E.....	81

10.1.1.1	PROFIBUS DP Fieldbus Coupler/Controller 750-333(/0xx-000), 750-833(/0xx-000)	81
10.1.1.2	PROFINET IO Fieldbus Coupler 750-370, 750-375(/025-000), 750-377(/025-000)	81
10.1.2	Parameterization 8 AI 0(4)-20 mA, S.E.	82
10.1.2.1	All PROFIBUS DP and PROFINET IO Fieldbus Couplers.....	85
10.1.2.2	PROFIBUS DP Fieldbus Coupler 750-333(/0xx-000), 750- 833(/0xx-000)	85
10.1.2.3	PROFINET IO Fieldbus Coupler 750-370, 750-375(/025-000), 750-377(/025-000)	86
List of Figures		88
List of Tables.....		89

1 Notes about this Documentation



Note

Always retain this documentation!

This documentation is part of the product. Therefore, retain the documentation during the entire service life of the product. Pass on the documentation to any subsequent user. In addition, ensure that any supplement to this documentation is included, if necessary.

1.1 Validity of this Documentation

This documentation is only applicable to the I/O module 750-496 (8AI 0/4-20mA S.E.).

The I/O module 750-496 shall only be installed and operated according to the instructions in this manual and in the manual for the used fieldbus coupler/controller.

NOTICE

Consider power layout of the WAGO-I/O-SYSTEM 750!

In addition to these operating instructions, you will also need the manual for the used fieldbus coupler/controller, which can be downloaded at www.wago.com. There, you can obtain important information including information on electrical isolation, system power and supply specifications.

1.2 Revision History

Table 1: Revision History

Document Version	Device Version		Description of Change
	Hardware	Software	
1.0.1	–	–	First issue
1.1.0	01	01	Total revision with new layout
1.2.0	01	01	Change of approvals

1.3 Copyright

This Manual, including all figures and illustrations, is copyright-protected. Any further use of this Manual by third parties that violate pertinent copyright provisions is prohibited. Reproduction, translation, electronic and phototechnical filing/archiving (e.g., photocopying) as well as any amendments require the written consent of WAGO Kontakttechnik GmbH & Co. KG, Minden, Germany. Non-observance will involve the right to assert damage claims.

1.4 Symbols

DANGER

Personal Injury!

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.

DANGER

Personal Injury Caused by Electric Current!

Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Personal Injury!

Indicates a moderate-risk, potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Personal Injury!

Indicates a low-risk, potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTICE

Damage to Property!

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.

NOTICE

Damage to Property Caused by Electrostatic Discharge (ESD)!

Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.

Note

Important Note!

Indicates a potential malfunction which, if not avoided, however, will not result in damage to property.



Information

Additional Information:

Refers to additional information which is not an integral part of this documentation (e.g., the Internet).

1.5 Number Notation

Table 2: Number Notation

Number Code	Example	Note
Decimal	100	Normal notation
Hexadecimal	0x64	C notation
Binary	'100' '0110.0100'	In quotation marks, nibble separated with dots (.)

1.6 Font Conventions

Table 3: Font Conventions

Font Type	Indicates
<i>italic</i>	Names of paths and data files are marked in italic-type. e.g.: <i>C:\Program Files\WAGO Software</i>
Menu	Menu items are marked in bold letters. e.g.: Save
>	A greater-than sign between two names means the selection of a menu item from a menu. e.g.: File > New
Input	Designation of input or optional fields are marked in bold letters, e.g.: Start of measurement range
“Value”	Input or selective values are marked in inverted commas. e.g.: Enter the value “4 mA” under Start of measurement range .
[Button]	Pushbuttons in dialog boxes are marked with bold letters in square brackets. e.g.: [Input]
[Key]	Keys are marked with bold letters in square brackets. e.g.: [F5]

2 Important Notes

This section includes an overall summary of the most important safety requirements and notes that are mentioned in each individual section. To protect your health and prevent damage to devices as well, it is imperative to read and carefully follow the safety guidelines.

2.1 Legal Bases

2.1.1 Subject to Changes

WAGO Kontakttechnik GmbH & Co. KG reserves the right to provide for any alterations or modifications. WAGO Kontakttechnik GmbH & Co. KG owns all rights arising from the granting of patents or from the legal protection of utility patents. Third-party products are always mentioned without any reference to patent rights. Thus, the existence of such rights cannot be excluded.

2.1.2 Personnel Qualifications

All sequences implemented on WAGO-I/O-SYSTEM 750 devices may only be carried out by electrical specialists with sufficient knowledge in automation. The specialists must be familiar with the current norms and guidelines for the devices and automated environments.

All changes to the coupler or controller should always be carried out by qualified personnel with sufficient skills in PLC programming.

2.1.3 Use of the WAGO-I/O-SYSTEM 750 in Compliance with Underlying Provisions

Fieldbus couplers, fieldbus controllers and I/O modules found in the modular WAGO-I/O-SYSTEM 750 receive digital and analog signals from sensors and transmit them to actuators or higher-level control systems. Using programmable controllers, the signals can also be (pre-) processed.

The devices have been developed for use in an environment that meets the IP20 protection class criteria. Protection against finger injury and solid impurities up to 12.5 mm diameter is assured; protection against water damage is not ensured. Unless otherwise specified, operation of the devices in wet and dusty environments is prohibited.

Operating the WAGO-I/O-SYSTEM 750 devices in home applications without further measures is only permitted if they meet the emission limits (emissions of interference) according to EN 61000-6-3. You will find the relevant information in the section “Device Description” > “Standards and Guidelines” in the manual for the used fieldbus coupler/controller.

Appropriate housing (per 2014/34/EU) is required when operating the WAGO-I/O-SYSTEM 750 in hazardous environments. Please note that a prototype test

certificate must be obtained that confirms the correct installation of the system in a housing or switch cabinet.

2.1.4 Technical Condition of Specified Devices

The devices to be supplied ex works are equipped with hardware and software configurations, which meet the individual application requirements. WAGO Kontakttechnik GmbH & Co. KG will be exempted from any liability in case of changes in hardware or software as well as to non-compliant usage of devices.

Please send your request for modified and new hardware or software configurations directly to WAGO Kontakttechnik GmbH & Co. KG.

2.2 Safety Advice (Precautions)

For installing and operating purposes of the relevant device to your system the following safety precautions shall be observed:



DANGER

Do not work on devices while energized!

All power sources to the device shall be switched off prior to performing any installation, repair or maintenance work.

DANGER

Install the device only in appropriate housings, cabinets or in electrical operation rooms!

The WAGO-I/O-SYSTEM 750 and its components are an open system. As such, install the system and its components exclusively in appropriate housings, cabinets or in electrical operation rooms. Allow access to such equipment and fixtures to authorized, qualified staff only by means of specific keys or tools.

NOTICE

Replace defective or damaged devices!

Replace defective or damaged device/module (e.g., in the event of deformed contacts), since the long-term functionality of device/module involved can no longer be ensured.

NOTICE

Protect the components against materials having seeping and insulating properties!

The components are not resistant to materials having seeping and insulating properties such as: aerosols, silicones and triglycerides (found in some hand creams). If you cannot exclude that such materials will appear in the component environment, then install the components in an enclosure being resistant to the above-mentioned materials. Clean tools and materials are imperative for handling devices/modules.

NOTICE

Clean only with permitted materials!

Clean soiled contacts using oil-free compressed air or with ethyl alcohol and leather cloths.

NOTICE

Do not use any contact spray!

Do not use any contact spray. The spray may impair contact area functionality in connection with contamination.

NOTICE

Do not reverse the polarity of connection lines!

Avoid reverse polarity of data and power supply lines, as this may damage the devices involved.

NOTICE



Avoid electrostatic discharge!

The devices are equipped with electronic components that may be destroyed by electrostatic discharge when touched. Please observe the safety precautions against electrostatic discharge per DIN EN 61340-5-1/-3. When handling the devices, please ensure that environmental factors (personnel, work space and packaging) are properly grounded.

3 Device Description

The I/O module 750-496 (8AI 0/4-20mA S.E.) receives signals with standardized values of 0 ... 20 mA, 4 ... 20 mA and 3.6 ... 21 mA (Namur NE43) from the field range.

The I/O module has 8 input channels for field signals.

The sensors are connected to the Push-in CAGE CLAMP® terminals AI1 and 24 V or AI2 ... AI8 and each 24 V.

The channels have a common reference potential.

The assignment of the connections is described in the “Connectors” section.

Connection examples are shown in section “Connect Devices” > ... > “Connection Example(s)”.

The input signal is electrically isolated and is transmitted with a resolution of 12 bits.

The field voltage and the system voltage are electrically isolated from each other.

The operational readiness and the trouble-free internal data bus communication of the channels are indicated via a green function LED.

One red error LED per channel indicates a short circuit or a measurement underrange/overrange.

For sensor types 3.6 21 mA and 4 ... 20 mA, the red error LED also indicates a wire break.

The meaning of the LEDs is described in the “Display Elements” section.

Power to the internal electronics is supplied via both the internal data bus and the field supply.

The I/O module 750-496 (8AI 0/4-20mA S.E.) receives the 24 V voltage supply for the field level from an upstream I/O module or from the fieldbus coupler/controller via blade-formed power jumper contacts. It then provides these potentials to subsequent I/O modules via spring-formed power jumper contacts.

NOTICE

Do not exceed maximum current via power jumper contacts!

The maximum current to flow through the power jumper contacts is 10 A.

Greater currents can damage the contacts.

When configuring your system, ensure that this current is not exceeded.

If exceeded, insert an additional supply module.

With consideration of the power jumper contacts, the individual modules can be arranged in any combination when configuring the fieldbus node. An arrangement in groups within the group of potentials is not necessary.

The 750-496 module can be used with the fieldbus couplers and controllers of the WAGO-I/O-SYSTEM 750 of the specified version or higher listed in the “Compatibility list” table.

Table 4: Compatibility List 750-496

Bus System	Fieldbus Coupler/Controller	Item No..	Firmware Version
PROFINET	Fieldbus coupler	750-375	03
		750-377	03
PROFIBUS	Fieldbus coupler	750-333	17
	Programmable fieldbus controller	750-833	16
ETHERNET	Fieldbus coupler	750-342	18
		750-352	04
	Programmable fieldbus controller	750-841	20
		750-842	19
		750-843	03
		750-852	01
		750-871	08
		750-872	04
		750-873	04
		750-880	04
		750-881	04
		750-882	04
		750-885	04
	Fieldbus controller PFC200	750-82x	01
DeviceNet	Fieldbus coupler	750-306	4L
	ECO Fieldbus coupler	750-346	11
	Programmable fieldbus controller	750-806	11
	Fieldbus coupler	750-337	20
CANopen		750-338	20
ECO Fieldbus coupler	750-347	10	
	750-348	10	
Programmable fieldbus controller	750-837	15	
	750-838	15	
Modbus	Fieldbus coupler	750-315/300-000	01
		750-316/300-000	01
	Programmable Fieldbus controller	750-815/300-000	01
		750-816/300-000	01
EtherCat	Fieldbus coupler	750-354	03
SERCOS III	Fieldbus coupler	750-351	04
CC-Link	Fieldbus coupler	750-310	03
BACnet	Programmable Fieldbus controller	750-831	03
KNX	Programmable Fieldbus controller	750-889	07

3.1 View

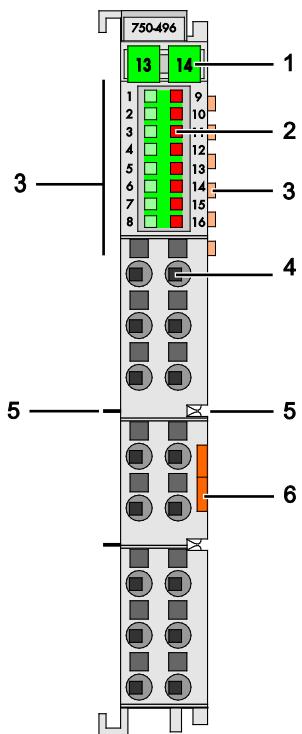


Figure 1: View

Table 5: Legend for Figure “View”

Pos.	Description	Details See Section
1	Marking possibility with Mini-WSB	---
2	Status LEDs	“Device Description” > “Display Elements”
3	Data contacts	“Device Description” > “Connectors”
4	Push-in CAGE CLAMP® connectors	“Device Description” > “Connectors”
5	Power jumper contacts	“Device Description” > “Connectors”
6	Release tab	“Mounting” > “Inserting and Removing Devices”

3.2 Connectors

3.2.1 Data Contacts/Internal Bus

Communication between the fieldbus coupler/controller and the I/O modules as well as the system supply of the I/O modules is carried out via the internal bus. It is comprised of 6 data contacts, which are available as self-cleaning gold spring contacts.

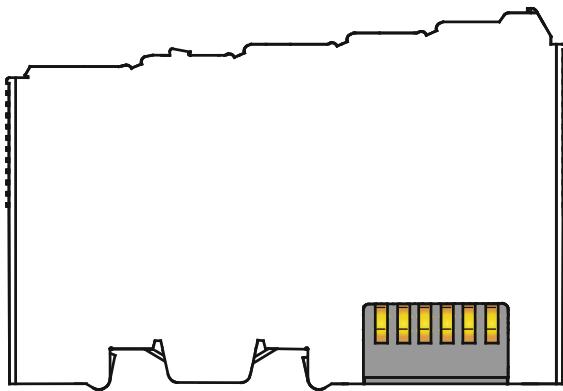


Figure 2: Data Contacts

NOTICE

Do not place the I/O modules on the gold spring contacts!

Do not place the I/O modules on the gold spring contacts in order to avoid soiling or scratching!



NOTICE

Ensure that the environment is well grounded!

The devices are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the devices, ensure that the environment (persons, workplace and packing) is well grounded. Avoid touching conductive components, e.g. data contacts.

3.2.2 Power Jumper Contacts/Field Supply

⚠ CAUTION

Risk of injury due to sharp-edged blade contacts!

The blade contacts are sharp-edged. Handle the I/O module carefully to prevent injury.

The I/O module 750-496 has 2 self-cleaning power jumper contacts that supply and transmit power for the field side. The contacts on the left side of the I/O module are designed as blade contacts and those on the right side as spring contacts.

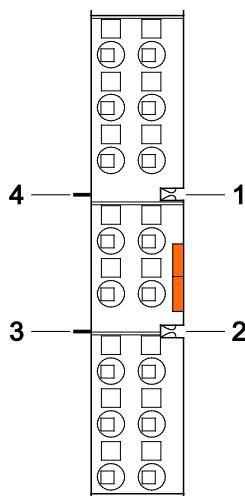


Figure 3: Power Jumper Contacts

Table 6: Legend for Figure “Power Jumper Contacts”

Contact	Type	Function
1	Spring contact	Potential transmission (U_v) for field supply
2	Spring contact	Potential transmission (0 V) for field supply
3	Blade contact	Potential feed-in (0 V) for field supply
4	Blade contact	Potential feed-in (U_v) for field supply

NOTICE

Do not exceed maximum current via power jumper contacts!

The maximum current to flow through the power jumper contacts is 10 A.

Greater currents can damage the contacts.

When configuring your system, ensure that this current is not exceeded.

If exceeded, insert an additional supply module.

Note



Use supply modules for ground (earth)!

The I/O module has no power jumper contacts for receiving and transmitting the earth potential. Use a supply module when an earth potential is needed for the subsequent I/O modules.

Note



Field supply must be provided!

An additional supply module must be used, which provides 24 V field supply voltage via the power jumper contacts.

3.2.3 Push-in CAGE CLAMP® Connectors

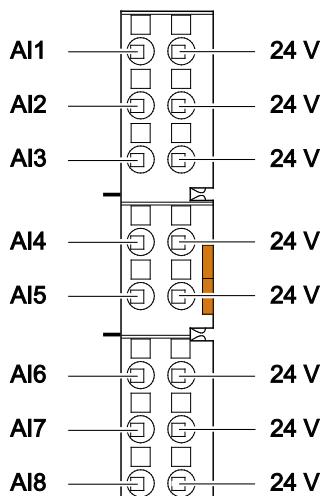


Figure 4: Push-in CAGE CLAMP® Connections

Table 7: Legend for the “Push-in CAGE CLAMP® Connections” Figure – 8-Channel, 2-Wire

Channel	Designation	Connection	Function
1	AI1	1	Analog input 1: Signal
	24 V	9	Field supply U _v
2	AI2	2	Analog input 2: Signal
	24 V	10	Field supply U _v
3	AI3	3	Analog input 3: Signal
	24 V	11	Field supply U _v
4	AI4	4	Analog input 4: Signal
	24 V	12	Field supply U _v
5	AI5	5	Analog input 5: Signal
	24 V	13	Field supply U _v
6	AI6	6	Analog input 6: Signal
	24 V	14	Field supply U _v
7	AI7	7	Analog input 7: Signal
	24 V	15	Field supply U _v
8	AI8	8	Analog input 8: Signal
	24 V	16	Field supply U _v



Note

Use shielded signal lines!

Only use shielded signal lines for analog signals and I/O modules which are equipped with shield clamps. Only then can you ensure that the accuracy and interference immunity specified for the respective I/O module can be achieved even in the presence of interference acting on the signal cable.

3.3 Display Elements




Figure 5: Display Elements

Table :8 Legend for the “Display Elements” Figure

Chann el	Designation	LED	State	Function
1	Function AI1	1	OFF	Not ready for operation or no/faulty internal bus communication, channel deactivated
			Green	Ready for operation and undisturbed internal bus communication
	Error AI1	9	OFF	No error and/or diagnostics deactivated, or channel deactivated
			Red	Permissible measurement range overrange and underrange, short circuit, general error Wire break (sensor type 4 ... 20 mA and 3.6 ... 21 mA only)
2	Function AI2	2		(see Channel 1)
	Error AI2	10		(see Channel 1)
3	Function AI3	3		(see Channel 1)
	Error AI3	11		(see Channel 1)
4	Function AI4	4		(see Channel 1)
	Error AI4	12		(see Channel 1)
5	Function AI5	5		(see Channel 1)
	Error AI5	13		(see Channel 1)
6	Function AI6	6		(see Channel 1)
	Error AI6	14		(see Channel 1)
7	Function AI7	7		(see Channel 1)
	Error AI7	15		(see Channel 1)
8	Function AI8	8		(see Channel 1)
	Error AI8	16		(see Channel 1)

3.4 Operating Elements

The I/O module 750-496 has no operating elements.

3.5 Schematic Diagram

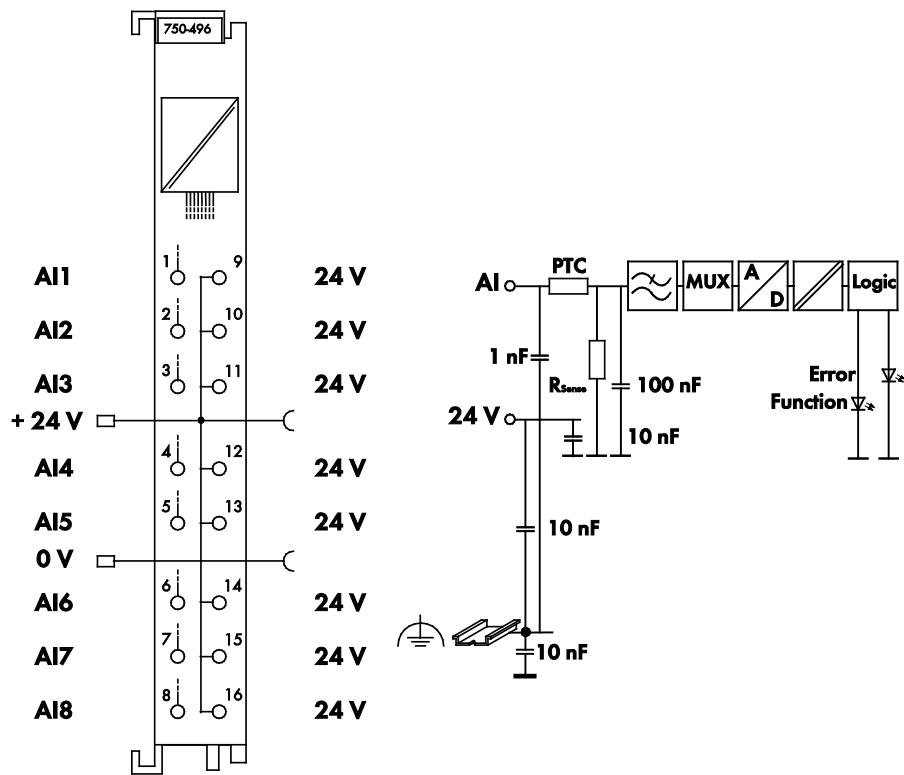


Figure 6: Schematic Diagram

3.6 Technical Data

3.6.1 Device Data

Table 9: Technical Data – Device

Width	12 mm
Height (from upper-edge of DIN rail)	64 mm
Depth	100 mm
Weight	Approx. 47 g

3.6.2 Power Supply

Table 10: Technical Data, Power Supply

Voltage Supply	Via system voltage internal bus (5 VDC) and power jumper contacts (24 VDC)
Current consumption, system voltage _{typ.} (5 VDC)	69 mA
Current consumption, power jumper contact _{max.} (24 VDC)	215 mA
Voltage via power jumper contacts	24 VDC
Current via power jumper contacts _{max}	10 A
Isolation (peak value)	500 V system/field side

3.6.3 Communication

Table 11: Technical Data – Communication

Data width, internal (internal data bus)	8 × 16-bit data 8 × 8-bit control/status (optional)
--	--

3.6.4 Inputs

Table 12: Technical Data – Inputs

Number of inputs	8
Connection types	Single-ended
Sensor connection	2-conductor connection
Signal current (configurable)	0 ... +20 mA
	+4 ... +20 mA
	+3.6 ... +21 mA
Input resistance _{typ.}	≤ 200 Ω
Configurable software input filter	Bessel filter 2nd order f _G = 25 Hz
Dielectric strength _{max.}	31.2 VDC
Resolution of the A/D converter	14 bits
Conversion method	SAR (Successive Approximation Register)
Conversion time _{typ.} (without filter)	
per channel	≤ 1.25 ms
per module	≤ 10 ms
Resolution of measured value	12 bits + 1 bit sign
Measuring error at 25 °C	< ±0.1% of full scale value
Temperature coefficient	< ±0.01% /K of full scale value
Diagnostics	Measurement range underflow
	Measurement range overflow
	Short circuit
	General error
	Wire break (sensor type 4 ... 20 mA and 3.6 ... 21 mA only)
	Process image
Signaling with diagnostics	Status byte
	LED

3.6.5 Connection Type

Table 13: Technical Data – Field Wiring

Wire connection	Push-in CAGE CLAMP®
Cross section, solid wire	0.08 mm ² ... 1.5 mm ² / AWG 28 ... 16
Cross section, fine-stranded wire	0.25 mm ² ... 1.5 mm ² / AWG 22 ... 16
Stripped lengths	8 mm ... 9 mm / 0.33 in

Table 14: Technical Data – Power Jumper Contacts

Power jumper contacts	Blade/spring contact, self-cleaning
-----------------------	-------------------------------------

Table 15: Technical Data – Data Contacts

Data contacts	Slide contact, hard gold plated, self-cleaning
---------------	--

3.6.6 Climatic Environmental Conditions

Table 16: Technical Data – Climatic Environmental Conditions

Operating temperature range	0 °C ... 55 °C
Storage temperature range	-25 °C ... +85 °C
Relative humidity without condensation	Max. 95 %
Resistance to harmful substances	Acc. to IEC 60068-2-42 and IEC 60068-2-43
Maximum pollutant concentration at relative humidity < 75 %	SO ₂ ≤ 25 ppm H ₂ S ≤ 10 ppm
Special conditions	Ensure that additional measures for components are taken, which are used in an environment involving: – dust, caustic vapors or gases – ionizing radiation

3.7 Approvals

The following approvals have been granted to 750-496 I/O modules:



Conformity Marking



UL508

The following approvals are pending for 750-496 I/O modules:



Korea Certification

MSIP-REM-W43-AIM750

The following Ex approvals have been granted to the basic version of 750-496 I/O modules:



cULus ANSI/ISA 12.12.01

Class I, Div2 ABCD T4

The following Ex approvals are pending for 750-496 I/O modules:

TÜV 07 ATEX 554086 X



I M2 Ex d I Mb
II 3 G Ex nA IIC T4 Gc
II 3 D Ex tc IIIC T135°C Dc

IECEx TUN 09.0001 X

Ex d I Mb
Ex nA IIC T4 Gc
Ex tc IIIC T135°C Dc

The following ship approvals are pending for 750-496 I/O modules:



ABS (American Bureau of Shipping)



Federal Maritime and Hydrographic Agency



BV (Bureau Veritas)



KR (Korean Register of Shipping)



LR (Lloyd's Register)

Env. 1, 2, 3, 4



NKK (Nippon Kaiji Kyokai)



PRS (Polski Rejestr Statków)



RINA (Registro Italiano Navale)

The following ship approvals have been granted to the basic version of 750-496 I/O modules:



DNV GL

[Temperature: B, Humidity: A, Vibration: B, EMC: B,
Enclosure: A]



Note

Applicable from HW 01 / SW 01!

This ship approval is only applicable from HW 01 / SW 01!

3.8 Standards and Guidelines

750-496 I/O modules meet the following standards and guidelines:

750-496 I/O modules meet the following requirements on emission and immunity of interference:

EMC CE-Immunity to interference EN 61000-6-2

and to EN 61131-2

EMC CE-Emission of interference EN 61000-6-3 + A1

and to EN 61131-2

4 Process Image

The 750-496 I/O module provides 1 status byte (8 bits) and 1 data word (16 bits) per channel.

The I/O module supplies the input current range 0 ... 20 mA or 4 ... 20 mA or 3.6 ... 21 mA (sensor type NAMUR NE43) at a resolution of 13 bits.

The digitalized measured value is transmitted to the process image of the coupler/controller in a data word (16 bits) as input byte “0” (low) and input byte “1” (high). This value is mapped with a resolution of 12 bits on bit B3 ... B14. Status information, which can be evaluated for fault detection, is contained in the two least significant bits (B0 ... B1).

In the case of a measurement underrange or overrange, bits B0 and B1 are set = 1. Bit 2 is not defined and is not evaluated.

4.1 Overview



Note

Presentation of control/status bytes a function of fieldbus coupler/controller!

The I/O module always makes its complete process image incl. control/status bytes available to the fieldbus coupler/controller. The **WAGO-I/O-CHECK** commissioning tool accesses the complete commissioning process image. The fieldbus coupler/controller uses a different process image to stage cyclic process data via the fieldbus. In the other process image, depending on the fieldbus coupler/controller, the representation of control/status bytes can be suppressed.

Table 17: Process Image – I/O Module 750-496

Process Image			
Input ¹⁾		Output ²⁾	
Byte 0	Status byte CH1_S0	Byte 0	Control byte CH1_C0
Byte 1	Function of status byte: Process value CH1_D0	Byte 1	Function of control byte: Reserved
Byte 2	Function of status byte: Process value CH1_D1	Byte 2	Function of control byte: Reserved
Byte 3	Control byte CH2_S1	Byte 3	Control byte CH2_C1
Byte 4	Function of status byte: Process value CH2_D0	Byte 4	Function of control byte: Reserved
Byte 5	Function of status byte: Process value CH2_D1	Byte 5	Function of control byte: Reserved
...
Byte 21	Status byte CH8_S7	Byte 21	Control byte CH8_C7
Byte 22	Function of status byte: Process value CH8_D0	Byte 22	Function of control byte: Reserved
Byte 23	Function of status byte: Process value CH8_D1	Byte 23	Function of control byte: Reserved

- 1) CHx_Sx = Status byte x from channel x
CHx_D0 = Low byte for process value for channel x
CHx_D1 = High byte for process value for channel x
- 2) CHx_Cx = Control byte x from channel x

4.2 Status Bytes

Status bytes are identically implemented for all channels. Therefore, the following description in this section applies to all status bytes of the I/O module.

Table 18: Status Byte CH1_S0

Status byte CH1_S0, Byte 1							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
RegCom	General Error	Wire Break	Short Circuit	User Overrange	User Underrange	Overrange	Underrange
Underrange	Underrange						
	0:	The field-side input current is above the current lower limit.					
	1:	The field-side input current is below the current lower limit.					
Overrange	Range exceeded						
	0:	The field-side input current is below the current upper limit.					
	1:	The field-side input current is above the current upper limit.					
User Underrange	User limiting value underrange						
	0:	The field-side input current is above the current lower limit configured by the user.					
	1:	The field-side input current is below the current lower limit configured by the user.					
User Overrange	User limiting value overrange						
	0:	The field-side input current is below the current upper limit configured by the user.					
	1:	The field-side input current is above the current upper limit configured by the user.					
Short Circuit	Short circuit						
	0:	The field-side input current is within the maximum permissible input current range.					
	1:	The field-side input current is above the maximum permissible input current range.					
Wire Break	Wire break ¹⁾						
	0:	The field-side input current is above 1 mA.					
	1:	The field-side input current is below 1 mA.					
General Error	General error						
	0:	No error or bit 0 (underrange), bit 1 (overrange), bit 4 (short circuit) or bit 5 (wire break) is/are not set.					
	1:	General error; bit 0 (underrange) or bit 1 (overrange) is/are set.					
RegCom	Register communication						
	0:	Register communication is disabled (normal mode).					
	1:	Register communication is enabled.					

1) Does not apply to 0 ... 20 mA (ID0)

4.3 Process Data

4.3.1 Overview of Sensor Types

The following table serves as an overview of all supported sensor types. The following sections contain detailed information about the individual sensor types. The information provided in the respective tables on the resolution of the measured values and the raw value ranges yielded from this are based on manufacturing scaling.

ID	Sensor type	Measurement range
0	0 ... 20 mA	0 ... +20 mA
1	4 ... 20 mA	+4 ... +20 mA
2	3.6 ... 21 mA	+3.8 ... +20.5 mA

4.3.2 Standard Format

4.3.2.1 Sensor Type 0 ... 20 mA

For the current measurement with sensor type 0 ... 20 mA, the input range of 0 ... +20 mA is mapped to a process value range of 0 ... +32767. The current underranges and overranges refer to manufacturer range violations.

Table 19: Process Image, Sensor Type 0-20 mA, Two's Complement Representation

Input current mA	Numeric value				Status Byte Hex.	Error LED
	Binary	XFU ¹⁾	Hex.	Dec.		
< 0	'0000.0000.0000.0	011'	0x0003	3	0x41	ON
Underrange ²⁾	'0000.0000.0000.0	000'	0x0000	0	0x00	OFF
0.0	'0000.0000.0000.0	000'	0x0000	0	0x00	OFF
2.5	'0000.1111.1111.1	000'	0x0FF8	4088	0x00	OFF
5.0	'0001.1111.1111.1	000'	0x1FF8	8184	0x00	OFF
7.5	'0010.1111.1111.1	000'	0x2FF8	12280	0x00	OFF
10.0	'0011.1111.1111.1	000'	0x3FF8	16376	0x00	OFF
12.5	'0100.1111.1111.1	000'	0x4FF8	20472	0x00	OFF
15.0	'0101.1111.1111.1	000'	0x5FF8	24568	0x00	OFF
17.5	'0110.1111.1111.1	000'	0x6FF8	28664	0x00	OFF
20.0	'0111.1111.1111.1	000'	0x7FF8	32760	0x00	OFF
Overrange ²⁾	'0111.1111.1111.1	011'	0x7FFB	32763	0x42	ON
> 20.0						
Short circuit ³⁾	'0111.1111.1111.1	011'	0x7FFB	32763	0x50	ON
> 21.0						

1) Status bits: X: not used, F= error, Ü= overflow

2) When underrange / overrange limit is ON

3) When short circuit diagnostics is ON

4.3.2.2 Sensor Type 4 ... 20 mA

For the current measurement with sensor type 4 ... 20 mA, the input range of 4 ... +20 mA is mapped to a value range of 0 ... +32767. The current underranges and overranges refer to manufacturer range violations.

Table 20: Process Image, Sensor Type 4 ... 20 mA, Two's Complement Representation

Input current mA	Numeric value				Status Byte Hex.	Error LED
	Binary	XFU ¹⁾	Hex.	Dec.		
< 1.0	'0000.0000.0000.0	011'	0x0003	3	0x60	ON
Wire break ³⁾	'0000.0000.0000.0	011'	0x0003	3	0x41	ON
< 4.0	'0000.0000.0000.0	000'	0x0000	0	0x00	OFF
Underrange ²⁾	'0000.0000.0000.0	000'	0x0000	0	0x00	OFF
4.0	'0000.0000.0000.0	000'	0x0000	0	0x00	OFF
5.6	'0000.1100.1100.0	000'	0x0CC8	3272	0x00	OFF
7.2	'0001.1001.1001.1	000'	0x1998	6552	0x00	OFF
8.8	'0010.0110.0110.0	000'	0x2660	9824	0x00	OFF
10.4	'0011.0011.0011.0	000'	0x3330	13104	0x00	OFF
12.0	'0011.1111.1111.1	000'	0x3FF8	16376	0x00	OFF
13.6	'0100.1100.1100.1	000'	0x4CC8	19656	0x00	OFF
15.2	'0101.1001.1001.1	000'	0x5998	22936	0x00	OFF
16.8	'0110.0110.0110.0	000'	0x6660	26208	0x00	OFF
18.4	'0111.0011.0011.0	000'	0x7330	29488	0x00	OFF
20.0	'0111.1111.1111.1	000'	0x7FF8	32760	0x00	OFF
Overrange ²⁾	'0111.1111.1111.1	011'	0x7FFB	32763	0x42	ON
> 20.0	'0111.1111.1111.1	011'	0x7FFB	32763	0x50	ON
Short circuit ³⁾	'0111.1111.1111.1	011'	0x7FFB	32763	0x50	ON
> 21.0	'0111.1111.1111.1	011'	0x7FFB	32763	0x50	ON

1) Status bits: X: not used, F=error, Ü=overflow

2) When underrange / overrange limit is ON

3) When wire break / short circuit diagnostics is ON

4.3.2.3 Sensor Type 3.6 ... 21 mA (NAMUR NE43)

For the current measurement with sensor type 3.6 ... 21 mA, the input range of +3.6 ... +21 mA is mapped to a value range of 0 ... +32767. The current underranges and overranges refer to manufacturer range violations.

Table 21: Process Image, Sensor Type 3.6 ... 21 mA (NAMUR NE43), Two's Complement Representation

Input current mA	Numeric value				Status Byte Hex.	Error LED
	Binary	XFÜ ¹⁾	Hex.	Dec.		
< 1.0	'1111.1100.1111.1	011'	0xFCFB	-773	0x60	ON
Wire break ³⁾	'1111.1100.1111.1	011'	0xFCFB	-773	0x41	ON
< 3.6	'1111.1100.1111.1	011'	0xFCFB	-773	0x41	ON
Underrange ²⁾	'1111.1100.1111.1	011'	0xFCFB	-773	0x41	ON
3.6	'1111.1100.1111.1	011'	0xFCFB	-773	0x41	ON
3.8	'1111.1110.0111.1	000'	0xFE78	-392	0x00	OFF
4.0	'0000.0000.0000.0	000'	0x0000	0	0x00	OFF
5.6	'0000.1100.0000.1	000'	0x0C08	3080	0x00	OFF
7.2	'0001.1000.0001.0	000'	0x1810	6160	0x00	OFF
8.8	'0010.0100.0010.0	000'	0x2420	9248	0x00	OFF
10.4	'0011.0000.0010.1	000'	0x3028	12328	0x00	OFF
12.0	'0011.1100.0011.1	000'	0x3C38	15416	0x00	OFF
13.6	'0100.1000.0100.0	000'	0x4840	18496	0x00	OFF
15.2	'0101.0100.0101.0	000'	0x5450	21584	0x00	OFF
16.8	'0110.0000.0101.1	000'	0x6058	24664	0x00	OFF
18.4	'0111.0000.0110.1	000'	0x6C68	27752	0x00	OFF
20.0	'0111.1000.0110.0	000'	0x7870	30832	0x00	OFF
20.5	'0111.1100.0011.1	000'	0x7C38	31800	0x00	OFF
21.0	'0111.1111.1111.1	011'	0x7FFB	32763	0x42	ON
Overrange ²⁾	'0111.1111.1111.1	011'	0x7FFB	32763	0x42	ON
> 21.0	'0111.1111.1111.1	011'	0x7FFB	32763	0x42	ON
Short circuit ³⁾	'0111.1111.1111.1	011'	0x7FFB	32763	0x50	ON
> 21.0	'0111.1111.1111.1	011'	0x7FFB	32763	0x50	ON

1) Status bits: X: not used, F= error, Ü= overflow

2) When underrange / overrange limit is ON

3) When wire break / short circuit diagnostics is ON

4.3.3 Special Format

4.3.3.1 Sensor Type 0 ... 20 mA

For the current measurement with sensor type 0 ... 20 mA, the input range of 0 ... +20 mA is mapped to a process value range of 0 ... +32767. The current underranges and overranges refer to manufacturer range violations.

Table 22: Process Image, Sensor Type 0 ... 20 mA, Amount/Sign Format

Input current mA	Numeric value				Status Byte Hex.	Error LED
	Binary	XFU ¹⁾	Hex.	Dec.		
< 0	'0000.0000.0000.0	011'	0x0003	3	0x41	ON
Underrange ²⁾						
0.0	'0000.0000.0000.0	000'	0x0000	0	0x00	OFF
2.5	'0000.1111.1111.1	000'	0x0FF8	4088	0x00	OFF
5.0	'0001.1111.1111.1	000'	0x1FF8	8184	0x00	OFF
7.5	'0010.1111.1111.1	000'	0x2FF8	12280	0x00	OFF
10.0	'0011.1111.1111.1	000'	0x3FF8	16376	0x00	OFF
12.5	'0100.1111.1111.1	000'	0x4FF8	20472	0x00	OFF
15.0	'0101.1111.1111.1	000'	0x5FF8	24568	0x00	OFF
17.5	'0110.1111.1111.1	000'	0x6FF8	28664	0x00	OFF
20.0	'0111.1111.1111.1	000'	0x7FF8	32760	0x00	OFF
Overrange ²⁾						
> 20.0	'0111.1111.1111.1	011'	0x7FFB	32763	0x42	ON
Short circuit ³⁾						
> 21.0	'0111.1111.1111.1	011'	0x7FFB	32763	0x50	ON

1) Status bits: X: not used, F= error, Ü= overflow

2) When underrange / overrange limit is ON

3) When short circuit diagnostics is ON

4.3.3.2 Sensor Type 4 ... 20 mA

For the current measurement with sensor type 4 ... 20 mA, the input range of 4 ... +20 mA is mapped to a value range of 0 ... +32767. The current underranges and overranges refer to manufacturer range violations.

Table 23: Process Image, Sensor Type 4 ... 20 mA, Amount/Sign Format

Input current mA	Numeric value				Status Byte Hex.	Error LED
	Binary	XFU ¹⁾	Hex.	Dec.		
< 1.0	'0000.0000.0000.0	011'	0x0003	3	0x60	ON
Wire break ³⁾	'0000.0000.0000.0	011'	0x0003	3	0x41	ON
< 4.0	'0000.0000.0000.0	000'	0x0000	0	0x00	OFF
Underrange ²⁾	'0000.0000.0000.0	000'	0x0000	0	0x00	OFF
4.0	'0000.0000.0000.0	000'	0x0000	0	0x00	OFF
5.6	'0000.1100.1100.0	000'	0x0CC8	3272	0x00	OFF
7.2	'0001.1001.1001.1	000'	0x1998	6552	0x00	OFF
8.8	'0010.0110.0110.0	000'	0x2660	9824	0x00	OFF
10.4	'0011.0011.0011.0	000'	0x3330	13104	0x00	OFF
12.0	'0011.1111.1111.1	000'	0x3FF8	16376	0x00	OFF
13.6	'0100.1100.1100.1	000'	0x4CC8	19656	0x00	OFF
15.2	'0101.1001.1001.1	000'	0x5998	22936	0x00	OFF
16.8	'0110.0110.0110.0	000'	0x6660	26208	0x00	OFF
18.4	'0111.0011.0011.0	000'	0x7330	29488	0x00	OFF
20.0	'0111.1111.1111.1	000'	0x7FF8	32760	0x00	OFF
Overrange ²⁾	'0111.1111.1111.1	011'	0x7FFB	32763	0x42	ON
> 20.0	'0111.1111.1111.1	011'	0x7FFB	32763	0x50	ON
Short circuit ³⁾	'0111.1111.1111.1	011'	0x7FFB	32763	0x50	ON
> 21.0	'0111.1111.1111.1	011'	0x7FFB	32763	0x50	ON

1) Status bits: X: not used, F=error, Ü=overflow

2) When underrange / overrange limit is ON

3) When wire break / short circuit diagnostics is ON

4.3.3.3 Sensor Type 3.6 ... 21 mA (NAMUR NE43)

For the current measurement with sensor type 3.6 ... 21 mA, the input range of +3.6 ... +21 mA is mapped to a value range of 0 ... +32767. The current underranges and overranges refer to manufacturer range violations.

Table 24: Process Image, Sensor Type 3.6 ... 21 mA (NAMUR NE43), Amount/Sign Format

Input current mA	Numeric value				Status Byte Hex.	Error LED
	Binary	XFÜ ¹⁾	Hex.	Dec.		
< 1.0	'1000.0011.0000.1	011'	0x8303	-771	0x60	ON
Wire break ³⁾	'1000.0011.0000.1	011'	0x8303	-771	0x41	ON
< 3.6	'1000.0011.0000.1	011'	0x8303	-771	0x41	ON
Underrange ²⁾	'1000.0011.0000.1	011'	0x8303	-771	0x41	ON
3.6	'1000.0011.0000.1	011'	0x8303	-771	0x41	ON
3.8	'1000.0001.1000.1	000'	0x8188	-392	0x00	OFF
4.0	'0000.0000.0000.0	000'	0x0000	0	0x00	OFF
5.6	'0000.1100.0000.1	000'	0x0C08	3080	0x00	OFF
7.2	'0001.1000.0001.0	000'	0x1810	6160	0x00	OFF
8.8	'0010.0100.0010.0	000'	0x2420	9248	0x00	OFF
10.4	'0011.0000.0010.1	000'	0x3028	12328	0x00	OFF
12.0	'0011.1100.0011.1	000'	0x3C38	15416	0x00	OFF
13.6	'0100.1000.0100.0	000'	0x4840	18496	0x00	OFF
15.2	'0101.0100.0101.0	000'	0x5450	21584	0x00	OFF
16.8	'0110.0000.0101.1	000'	0x6058	24664	0x00	OFF
18.4	'0111.0000.0110.1	000'	0x6C68	27752	0x00	OFF
20.0	'0111.1000.1110.0	000'	0x7870	30832	0x00	OFF
20.5	'0111.1100.0011.1	000'	0x7C38	31800	0x00	OFF
21.0	'0111.1111.1111.1	011'	0x7FFB	32763	0x42	ON
Overrange ²⁾	'0111.1111.1111.1	011'	0x7FFB	32763	0x42	ON
> 21.0	'0111.1111.1111.1	011'	0x7FFB	32763	0x42	ON
Short circuit ³⁾	'0111.1111.1111.1	011'	0x7FFB	32763	0x50	ON
> 21.0	'0111.1111.1111.1	011'	0x7FFB	32763	0x50	ON

1) Status bits: X: not used, F= error, Ü= overflow

2) When underrange / overrange limit is ON

3) When wire break / short circuit diagnostics is ON

5 Mounting

5.1 Mounting Sequence

Fieldbus couplers/controllers and I/O modules of the WAGO-I/O-SYSTEM 750 are snapped directly on a carrier rail in accordance with the European standard EN 50022 (DIN 35).

The reliable positioning and connection is made using a tongue and groove system. Due to the automatic locking, the individual devices are securely seated on the rail after installation.

Starting with the fieldbus coupler/controller, the I/O modules are mounted adjacent to each other according to the project design. Errors in the design of the node in terms of the potential groups (connection via the power contacts) are recognized, as the I/O modules with power contacts (blade contacts) cannot be linked to I/O modules with fewer power contacts.

CAUTION

Risk of injury due to sharp-edged blade contacts!

The blade contacts are sharp-edged. Handle the I/O module carefully to prevent injury.

NOTICE

Insert I/O modules only from the proper direction!

All I/O modules feature grooves for power jumper contacts on the right side. For some I/O modules, the grooves are closed on the top. Therefore, I/O modules featuring a power jumper contact on the left side cannot be snapped from the top. This mechanical coding helps to avoid configuration errors, which may destroy the I/O modules. Therefore, insert I/O modules only from the right and from the top.

Note

Don't forget the bus end module!

Always plug a bus end module (750-600) onto the end of the fieldbus node! You must always use a bus end module at all fieldbus nodes with WAGO-I/O-SYSTEM 750 fieldbus couplers/controllers to guarantee proper data transfer.

5.2 Inserting and Removing Devices

NOTICE

Perform work on devices only if they are de-energized!

Working on energized devices can damage them. Therefore, turn off the power supply before working on the devices.

5.2.1 Inserting the I/O Module

1. Position the I/O module so that the tongue and groove joints to the fieldbus coupler/controller or to the previous or possibly subsequent I/O module are engaged.



Figure 7: Insert I/O Module (Example)

2. Press the I/O module into the assembly until the I/O module snaps into the carrier rail.

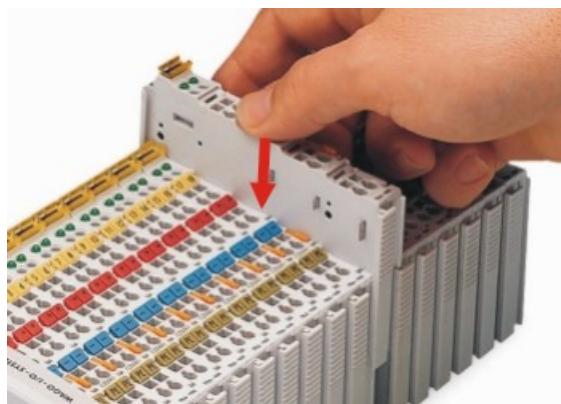


Figure 8: Snap the I/O Module into Place (Example)

With the I/O module snapped in place, the electrical connections for the data contacts and power jumper contacts (if any) to the fieldbus coupler/controller or to the previous or possibly subsequent I/O module are established.

5.2.2 Removing the I/O Module

1. Remove the I/O module from the assembly by pulling the release tab.

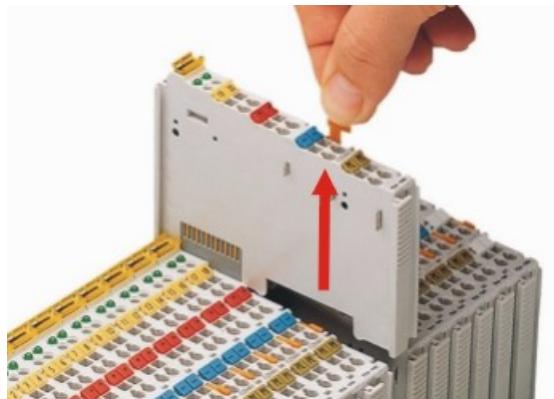


Figure 9: Removing the I/O Module (Example)

Electrical connections for data or power jumper contacts are disconnected when removing the I/O module.

6 Connect Devices

6.1 Connecting a Conductor to the Push-in CAGE CLAMP®

The Push-in CAGE CLAMP® connection is appropriate for solid, stranded and finely stranded conductors.



Note

Only connect one conductor to each Push-in CAGE CLAMP® connection!

Only one conductor may be connected to each Push-in CAGE CLAMP® connection.

Do not connect more than one conductor at one single connection!

If more than one conductor must be routed to one connection, these must be connected in an up-circuit wiring assembly, for example using WAGO feed-through terminals.

Terminate both solid and stranded or ferruled conductors by simply pushing them in - no tool required. For all other types of conductors, Push-in CAGE CLAMP® must be opened for connection with an operating tool with a 2.5 mm blade (order no. 210-719).

1. To open the Push-in CAGE CLAMP® insert the actuating tool into the opening above the connection.
2. Insert the conductor into the corresponding connection opening.
3. To close the Push-in CAGE CLAMP® simply remove the tool - the conductor is then clamped firmly in place.

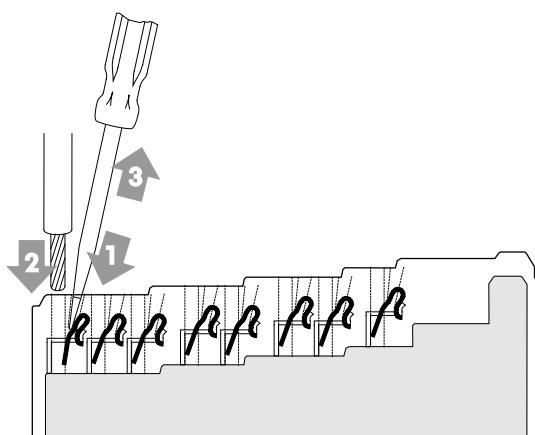


Figure 10: Connecting a Conductor to a Push-in CAGE CLAMP®

6.2 Connection Example

Note



Use shielded signal lines!

Only use shielded signal lines for analog signals and I/O modules which are equipped with shield clamps. Only then can you ensure that the accuracy and interference immunity specified for the respective I/O module can be achieved even in the presence of interference acting on the signal cable.

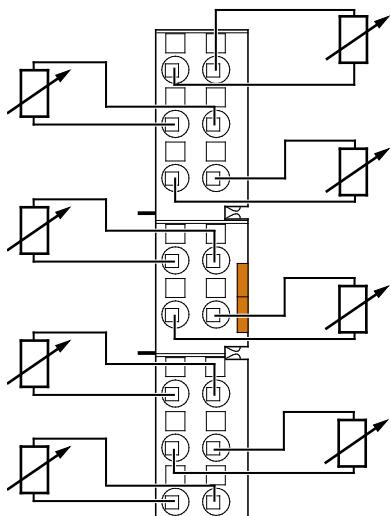


Figure 11: Connection example – 2-Wire

7 Commissioning

7.1 Parameterization with WAGO-I/O-CHECK

The WAGO-I/O-CHECK software from WAGO Kontakttechnik GmbH & Co. KG can be used to conveniently and completely configure and parameterize the I/O module. You have the following options.

- Graphical display of bus nodes
- Display of the measured values
- Settings for the application
- Configuration of the I/O module operating modes
- Parameterization of module, channel and scaling settings
- Calibration of channels and adjustment of analog inputs
- Monitoring



Information

WAGO-I/O-CHECK

You can obtain the WAGO-I/O-CHECK software on a CD under Item No. 759-302. This CD contains all the application program files and an explanation. You can find a description at the internet page at <http://www.wago.com>



Note

Save all your settings before you begin parameterization!

To be on the safe side you should always save all of your current settings in a parameter file before you begin parameterization. This enables you to always use the original values, should any parameters you are defining not be correct.

To open specific parameterization dialogs for the I/O module 750-496, proceed as follows:

- 1.Right click on the I/O module.
2. Click the **Settings** menu item (see following figure).

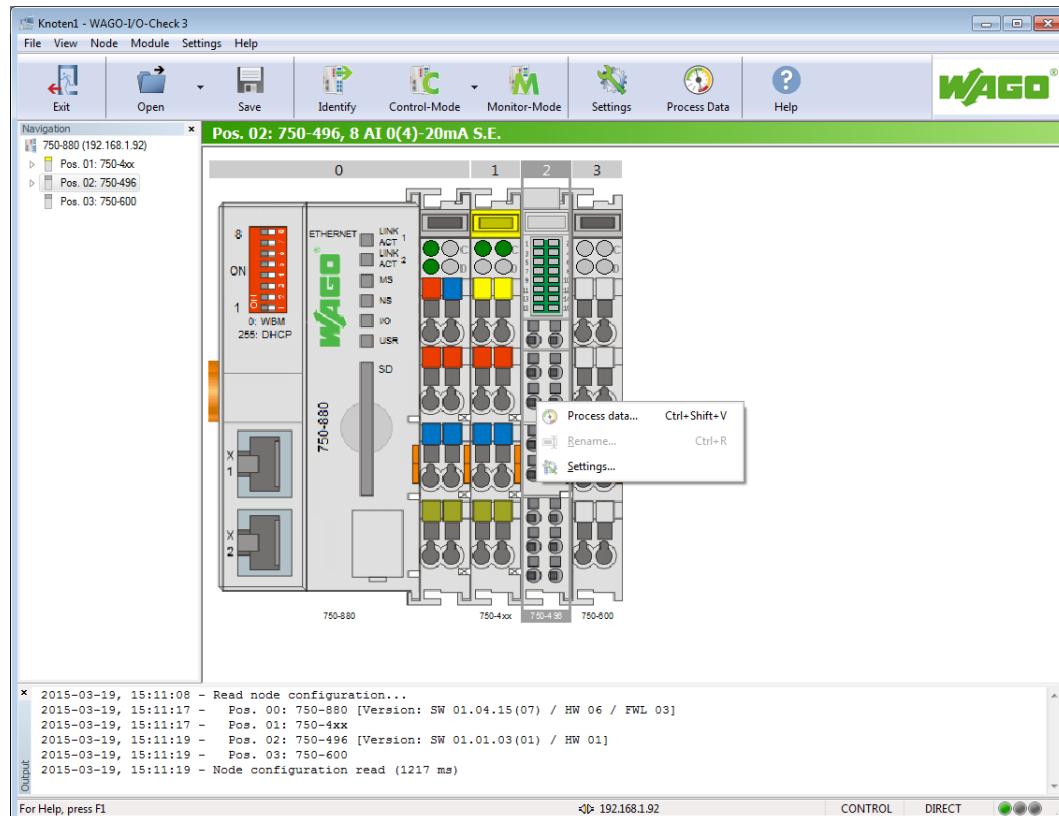


Figure 12: WAGO-I/O-CHECK user interface

The configuration dialog appears, which forms the basis for the following description. This forms the basis for the subsequent explanation.

7.1.1 Parameterization Dialog

The parameterization dialog is divided into the following areas:

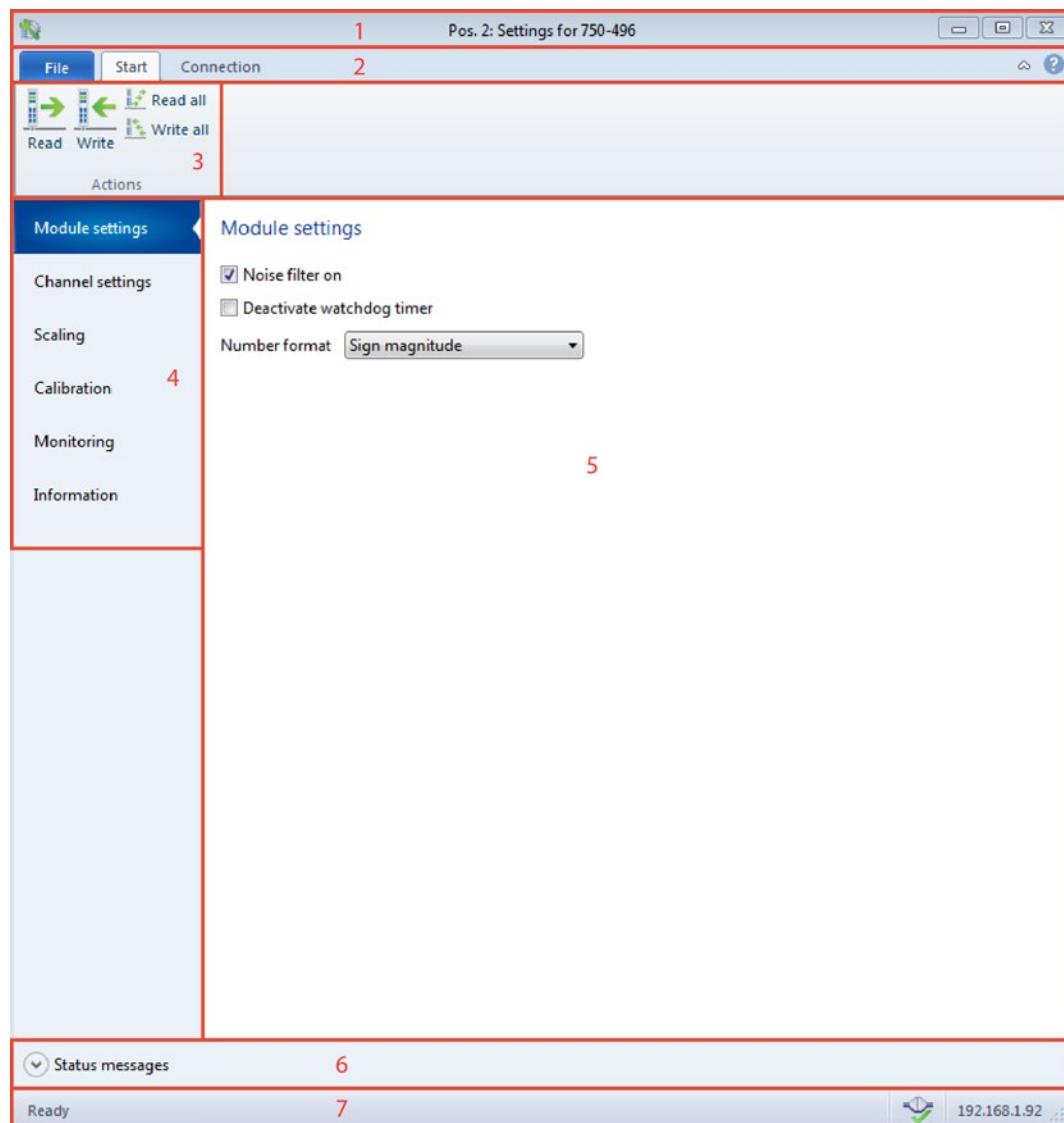


Figure 13: Parameterization Dialog for the I/O Module 750-496

- 1 Title bar
- 2 Horizontal tab menu
- 3 Main menu
- 4 Vertical tab menu
- 5 Area of application
- 6 Status messages
- 7 Status bar

The individual areas are explained in more detail in the following sections.

7.1.1.1 Title Bar

The title bar in the parameterization dialog contains the program icon, a window title and buttons for exiting, minimizing and maximizing the application window.






Figure 14: Title Bar in the Parameterization Dialog

The window title provides information about the position of the selected I/O module within the fieldbus node used and the item number of the selected I/O module.

7.1.1.2 Main Menu

Table 25: buttons on the main menu

Button	Function	Description
 Connect	[Connect]	Creates a connection to the I/O module
 Disconnect	[Disconnect]	Interrupts an existing connection to the I/O module
 Read	[Read]	Reads all parameters of the currently displayed view in the application area of the I/O module.
 Read all	[Read all]	Reads all parameters from the I/O module including module, channel, scaling and calibration settings.
 Write	[Write]	Writes all parameters of the currently displayed view in the application area to the I/O module.
 Write all	[Write all]	Writes all parameters to the I/O module including module, channel, scaling and calibration settings.
 Channel 1	[Channel x]	Opens the channel selection list.

7.1.1.3 Horizontal Tab Menu

The horizontal tab menu contains the following tabs:




Figure 15: Horizontal Tab Menu

Click one of the tabs to display the respective selection options in the main menu.

The individual tabs are explained in more detail in the following sections.

7.1.1.3.1 "File" Tab

The **File** tab opens the application menu. It contains the following buttons:

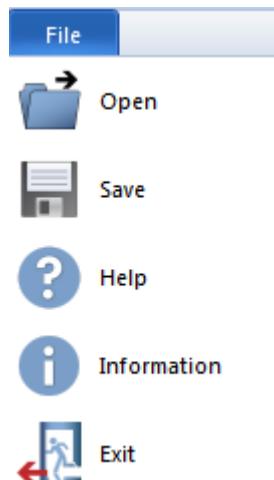


Figure 16: Buttons in the Application Menu

Table 26: Buttons in the application menu

Button	Function	Description
 Open	[Open]	Opens the dialog for loading a parameter file.
 Save	[Save]	Opens the dialog for saving a parameter file.
 Help	[Help]	Opens the manual for the I/O module 750-496 in PDF format
 Information	[Information]	Opens the information dialog, which contains details about the version of the software used and the manufacturer's contact information.
 Exit	[Exit]	Closes the parameterization dialog and the connection to the I/O module is interrupted.
Recent parameter files		Lists recent parameter files (max. 15); you can open the files from this area directly.

Select one of the menu items to execute the respective action.

7.1.1.3.1.1 “Open” Menu Item



Note

Only open parameter files created with WAGO-I/O-CHECK!

Please note that only parameter files created with WAGO-I/O-CHECK can be opened. The parameter files have the extension ***.ai**.

In this menu item you can open and load an existing parameter file. Proceed as follows:

1. Click the [File] button in the horizontal tab menu.
2. The application menu opens.
3. Click the [Open] button in the application menu.
4. A standard Windows dialog for selecting the source directory opens.
5. Select the parameter file that you want to open.
6. Click [Open] in the standard Windows dialog.
7. The parameter file opens.

7.1.1.3.1.2 “Save” Menu Item



Note

Calibration settings are not saved!

Please note that the calibration settings cannot be saved in the parameter file.



Note

Note the memory range!

Please note that only the settings are saved in the parameter file that you have already transferred to the I/O module by clicking the [**Write**] or [**Write all**] buttons in the main menu.

In this menu item you can save the changes you have made in a parameter file. Proceed as follows:

1. Click the [**File**] button in the horizontal tab menu.
2. The application menu opens.
3. Click the [**Save**] button in the application menu.
4. A standard Windows dialog appears to select the target directory.
5. Select the target directory in which you want to save the new parameter file.
6. Click [**Save**] in the standard Windows dialog.
7. The parameter file is saved to the target directory that you selected.

7.1.1.3.2 “Start” Tab

Click the **Start** tab in the horizontal tab menu to display the following selection options in the main menu.



Figure 17: Contents of the Horizontal Tab **Start**

If you select the **Channel settings** menu item in the vertical tab menu, you can also choose the required I/O module channel in the main menu.

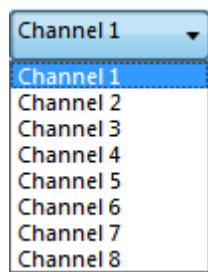


Figure 18: Start > Main Menu > Channel Selection List

The exact meaning of the individual selection options is described in the “Main Menu” section.

7.1.1.3.3 “Connection” Tab

Click the **Connection** tab in the horizontal tab menu to display the following selection options in the main menu.

If there is no connection to the I/O module, the following button appears:



Figure 19: **Connection** Tab for Disconnected I/O Module

Click the **[Connect]** button to establish a connection to the I/O module.

If there is a connection to the I/O module, the following button appears:



Figure 20: **Connection** Tab for Connected I/O Module

Click the **[Disconnect]** button to interrupt the connection to the I/O module.

The exact meaning of the individual selection options is described in the “Main Menu” section.

7.1.1.4 Vertical Tab Menu

In the vertical tab menu, you can select the individual module- and channel-specific menu items.

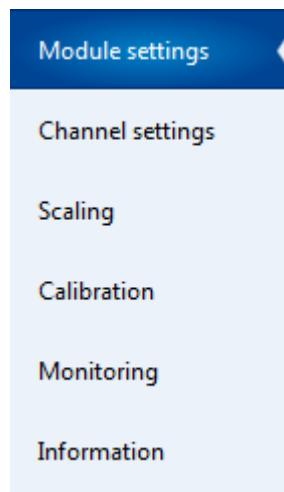


Figure 21: Overview of the Vertical Tab Menu

Click one of the menu items to call up the related parameterization options in the application area.

The exact meaning of the individual selection options is described in the following sections.

7.1.1.4.1 “Module settings” Menu Item



Note

Save settings!

Click the [Write] or [Write all] button to write any settings you have made to the I/O module.

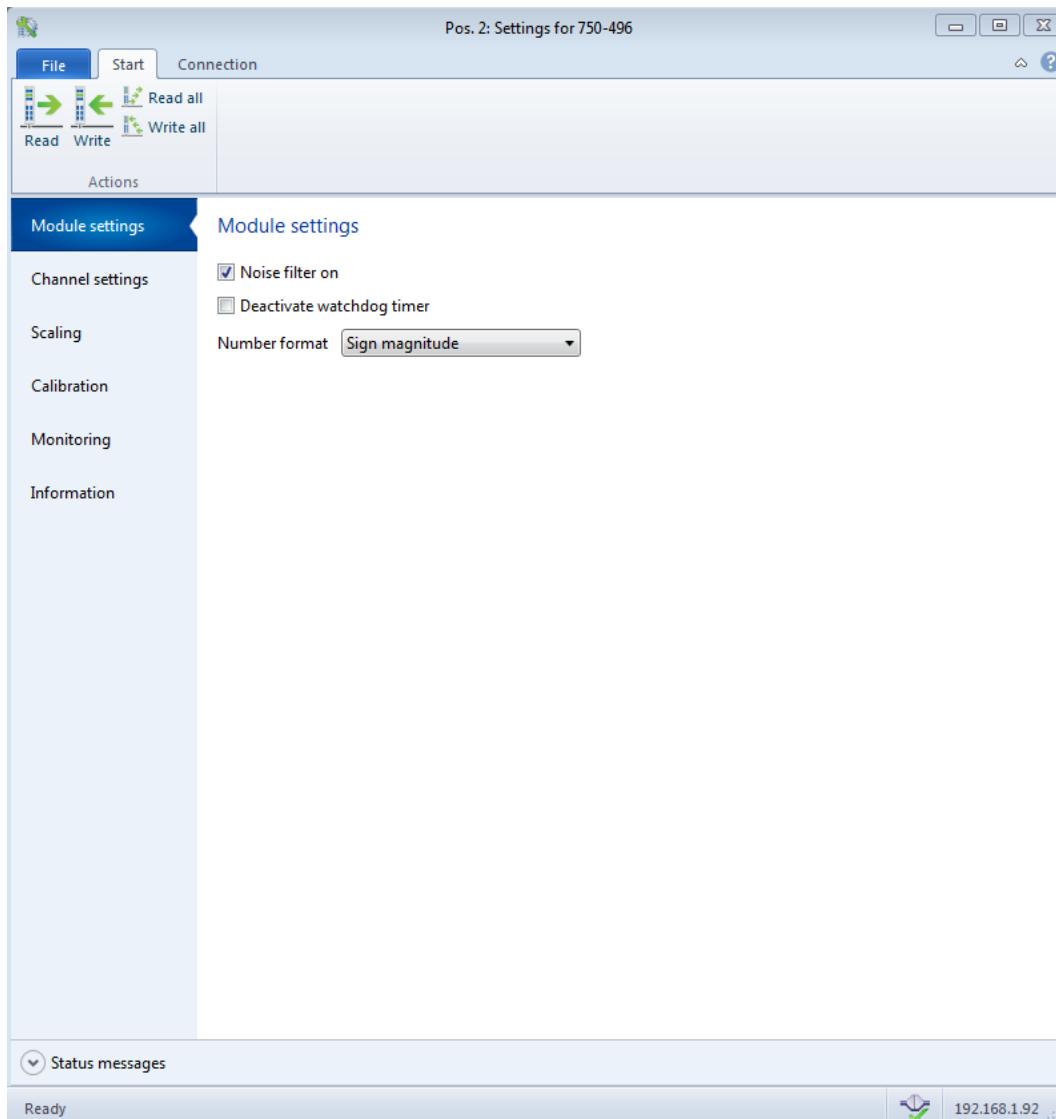


Figure 22: Module settings Menu Item View

Table 27: **Module settings** Menu Item

Option	Description
Noise Filter	
Noise filter on	<input type="checkbox"/> *) The noise filter is deactivated. <input checked="" type="checkbox"/> The noise filter is activated.
Watchdog Timer	
Deactivate watchdog timer	<input type="checkbox"/> *) The watchdog timer is activated. <input checked="" type="checkbox"/> The watchdog timer is deactivated. The green LEDs illuminate continuously.
Process value format	
Number format	Two's complement representation *) Amount/sign format

*) Factory setting

7.1.1.4.2 “Channel settings” Menu Item



Note

Save settings!

Click the [**Write**] or [**Write all**] button to write any settings you have made to the I/O module.



Note

Offset input for sensor type NAMUR NE43 not possible!

When selecting the sensor type 3.6 ... 21 mA (NAMUR NE 43), it is not possible to enter an offset value for the range violation diagnostics.

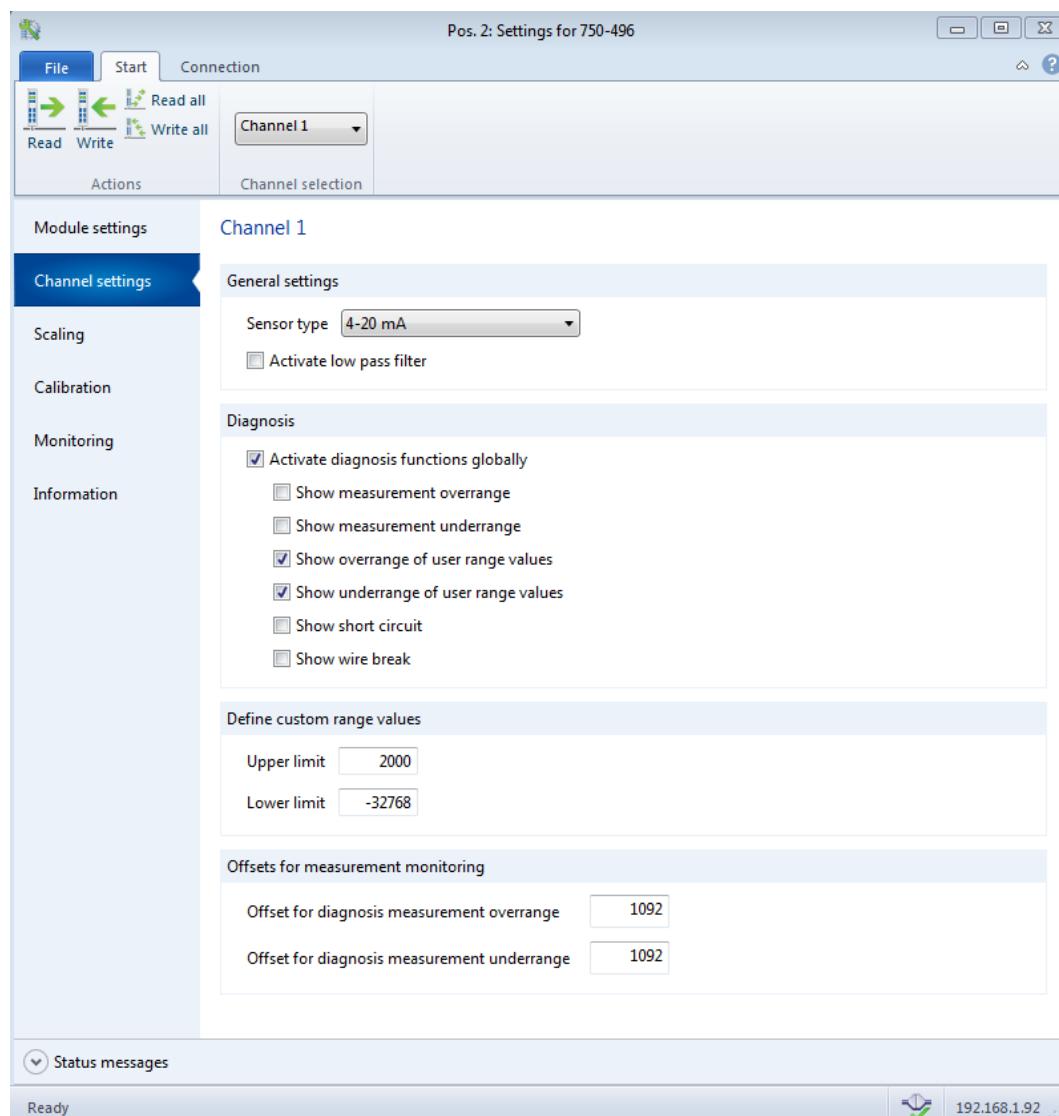


Figure 23: Channel settings Menu Item View

Table 28: Channel settings Menu Item

Option	Description	
General Settings		
Sensor type	Channel deactivated	The channel selected in the main menu is deactivated.
	0 ... 20 mA	If the channel is deactivated, “0x7FFF” appears in the Monitoring menu item under process value “N/A” (not available) and under hexadecimal process value.
	4 ... 20 mA ^{*)}	Measurement range +4 ... +20 mA
	3.6 ... 21 mA (NAMURNE43)	Measurement range +3.8 ... +20.5 mA
Software low pass filter ON	<input checked="" type="checkbox"/> The software low pass filter is activated. <input type="checkbox"/> ^{*)} The software low pass filter is deactivated.	
Diagnostics		
Show measurement overrange	<input checked="" type="checkbox"/> ^{*)} The “Measurement Overrange” is activated and is displayed in the status byte. <input type="checkbox"/> The “Measurement Overrange” diagnosis function is	

Table 28: **Channel settings** Menu Item

Option	Description
	deactivated and not displayed in the status byte.
Show measurement underrange	<input checked="" type="checkbox"/> *) The “Measurement Underrange” diagnosis function is activated and is displayed in the status byte.
	<input type="checkbox"/> The “Measurement Underrange” diagnostics function is deactivated and is not displayed in the status byte.
Show overrange of user range values	<input checked="" type="checkbox"/> *) The “User limiting value overrange” diagnosis function is activated and is displayed in the status byte.
	<input type="checkbox"/> The “User limiting value overrange” diagnosis function is deactivated and is not displayed in the status byte.
Show underrange of user range values	<input checked="" type="checkbox"/> *) The “User limiting value underrange” diagnosis function is activated and is displayed in the status byte.
	<input type="checkbox"/> The “User limiting value underrange” diagnosis function is deactivated and is not displayed in the status byte.
Show short circuit	<input checked="" type="checkbox"/> *) The “Display short circuit” diagnosis function is activated and is displayed in the status byte.
	<input type="checkbox"/> The “Display short circuit” diagnosis function is deactivated and is not displayed in the status byte.
Show wire break	<input checked="" type="checkbox"/> *) The “Show wire break” is activated and is displayed in the status byte.
	<input type="checkbox"/> The “Show wire break” diagnosis function is deactivated and is not display status byte.
Specifying Limiting Values	
Upper limit	Enter the upper limiting value of your required value range. The value entered must fall within the value range -32768 ... +32767.
Lower limit	Enter the lower limiting value of your required value range. The value entered must fall within the value range -32768 ... +32767.
Offset for Measurement Range Monitoring	
Offset for diagnosis measurement overrange	Enter the offset value at which the “Measurement Range Overrange” diagnostic message should be triggered. Note: When selecting the sensor type 3.6 ... 21mA (NAMUR NE43), you are not permitted to determine this value.
Offset for diagnosis measurement underrange	Enter the offset value at which the “Measurement Range Underrange” diagnostic message should be triggered. Note: When selecting the sensor type 3.6 ... 21mA (NAMUR NE43), you are not permitted to determine this value.

*) Factory setting

7.1.1.4.3 “Scaling” Menu Item



Note

Save settings!

Click the [Write] or [Write all] button to write any settings you have made to the I/O module.



Note

Selecting the scaling method!

Factory scaling is always active according to the measurement range selected.

Gain/Offset values can be adjusted by activating the user scaling.

Activating/deactivating factory scaling has no effect here.



Note

Scaling method is carried out by channel!

Before writing the settings to the I/O module, make sure to select the respective channel.

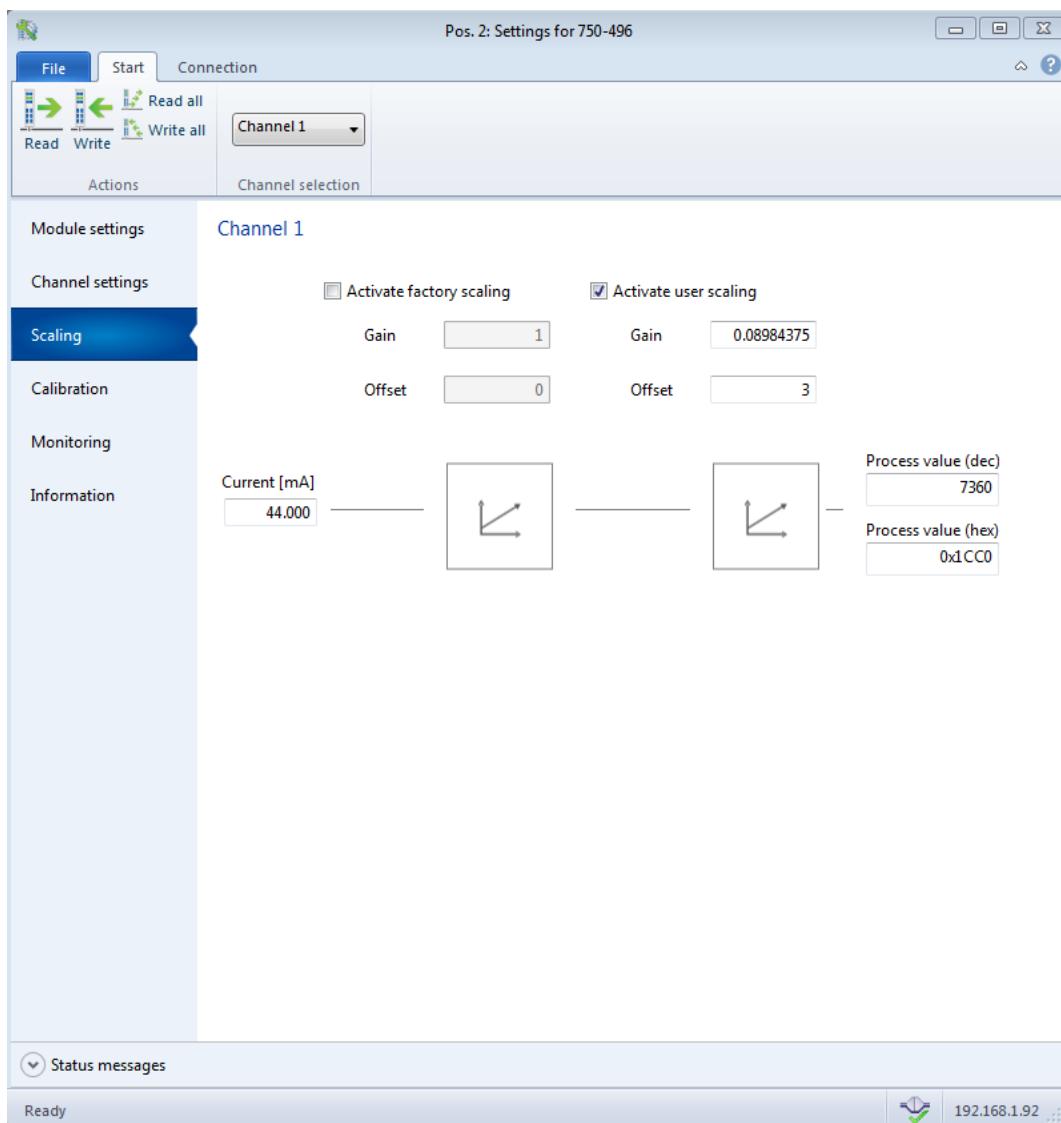


Figure 24: Scaling Menu Item View

Table 29: **Scaling** Menu Item

Option	Description
Channel x	
Activate factory scaling	<input checked="" type="checkbox"/> Factory scaling is activated (no effect).
	<input type="checkbox"/> *) Factory scaling is deactivated (no effect).
	Gain The Gain value is specified by the manufacturer.
	Offset The Offset value is specified by the manufacturer.
Activate user scaling	<input checked="" type="checkbox"/> User-defined scaling is active. By activating this setting you can also specify the individual gain and offset values.
	<input type="checkbox"/> *) User scaling is deactivated. Individually specified gain and offset values cannot be entered.
	Gain Enter the Gain value for the user scaling. The Gain value is used as a gain factor on the process value. The value entered must fall within the value range 0 ... 65535. The resolution is 1/1024.
	Offset Enter the Offset value for the user scaling. The Offset value causes a zero offset of the process value (shift along the Y axis). The value entered must fall within the value range -32768 ... 32767.
Current [mA]	Display of the calibrated input current in millamps (mA). This is a 32-bit value. If the channel is deactivated, "N/A" (not available) is displayed. The input current value is read cyclically from the I/O module.
Process value (dec)	Display of the process value for the channel selected in decimal notation. If the channel is deactivated, "N/A" (not available) is displayed. The process value is read cyclically from the I/O module.
Process value (hex)	Display of the process value for the channel selected in hexadecimal notation. If the channel is deactivated, "0x7FFF" (not available) is displayed. The process value is read cyclically from the I/O module.

*) Factory setting

7.1.1.4.4 “Calibration” Menu Item



Note

Save settings!

Click the [Write] or [Write all] button to write any settings you have made to the I/O module.

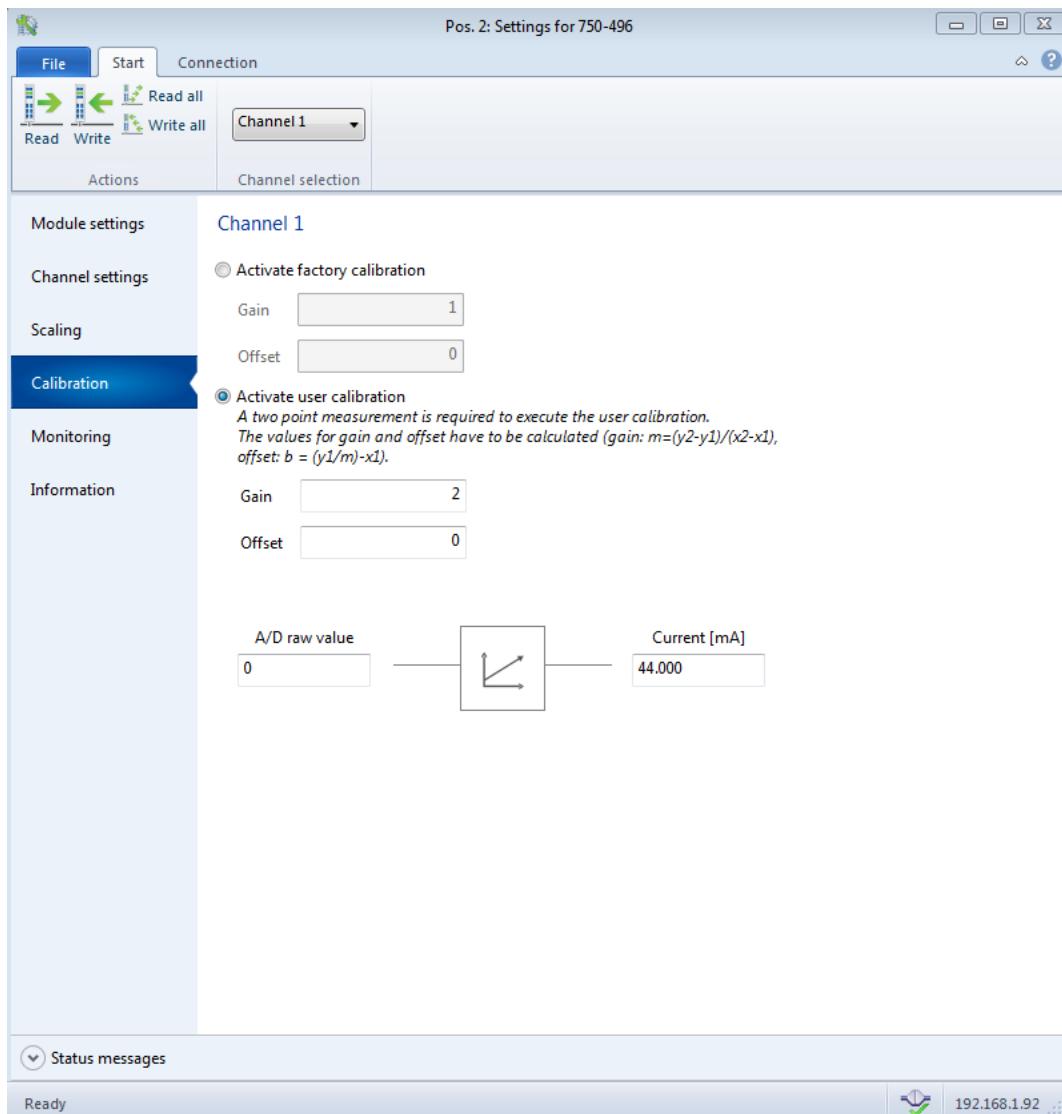


Figure 25: Calibration Menu Item View

Table 30: **Calibration** Menu Item

Option	Description	
Activate factory configuration		
Activate factory configuration	<input checked="" type="radio"/> *)	Factory calibration is activated and user calibration is deactivated.
	<input type="radio"/>	Factory calibration is deactivated and user calibration is activated.
	Gain	The Gain value is specified by the manufacturer.
	Offset	The Offset value is specified by the manufacturer.
Activate user calibration		
Selection of the calibration method	<input checked="" type="radio"/>	User calibration is activated and factory calibration is deactivated. You determine the gain and offset value yourself.
	<input type="radio"/> *)	User calibration is deactivated and factory calibration is activated.
	Gain	Enter the Gain value for the user calibration. The Gain value changes the gain factor of the A/D raw value. The value entered must fall within the value range 0 ... 65535. The resolution is 1/8192.
	Offset	Enter the Offset value for the user calibration. The Offset value moves the zero point of the A/D raw value (offset on the y axis). The value entered must fall within the value range -32768 ... 32767.
A/D raw value	Raw value of the analog/digital converter. This is a 14-bit value. If the channel is deactivated, "N/A" (not available) is displayed. The A/D raw value is read cyclically from the I/O module.	
Current [mA]	Display of the calibrated input current in millamps (mA). This is a 32-bit value. If the channel is deactivated, "N/A" (not available) is displayed. The input current value is read cyclically from the I/O module.	

*) Factory setting

7.1.1.4.5 “Monitoring” Menu Item

In this area, an overview of all of the I/O module channels are displayed individually. This overview provides information about the process value of each individual I/O module channel.

Note

Save settings!
Click the [Write] or [Write all] button to write any settings you have made to the I/O module.

The screenshot shows the software interface for the WAGO-I/O-SYSTEM 750. At the top, there is a menu bar with File, Start, and Connection tabs. Below the menu bar, there are several icons for actions like Read all, Write all, Read, and Write. On the left, a sidebar has tabs for Module settings, Channel settings, Scaling, Calibration, and Monitoring, with Monitoring currently selected. The main area displays a table of channel settings:

	Channel	Measurement value	Process value (dec)	Process value (hex)
Module settings	Channel 1	44.000 mA	7360	0x1CC0
Channel settings	Channel 2	N/A	N/A	0xFFFF
Scaling	Channel 3	132.000 mA	32763	0xFFFB
Calibration	Channel 4	11.221 mA	14792	0x39C8
Monitoring	Channel 5	2.199 mA	-771	0x8303
	Channel 6	N/A	N/A	0xFFFF
	Channel 7	0.042 mA	72	0x0048
	Channel 8	0.005 mA	-771	0x8303

At the bottom, there are status messages indicating "Ready" and a connection status icon showing a green checkmark and the IP address 192.168.1.92.

Figure 26: Monitoring Menu Item View


Table 31: **Monitoring** Menu Item

Option	Description
Process value overview	
Channel	Display of the bus channel
Measured value	<p>Display of the calibrated input current in millamps (mA). This is a 32-bit value. If the channel is deactivated, “N/A” (not available) is displayed.</p> <p>The measured value is read cyclically from the I/O module.</p>
Process value (dec)	<p>Display of the process value in decimal notation. If the channel is deactivated, “N/A” (not available) is displayed.</p> <p>The process value is read cyclically from the I/O module.</p>
Process value (hex)	<p>Display of the process value in hexadecimal notation. If the channel is deactivated, the process value (hex) “0x7FFF” is displayed.</p> <p>The process value is read cyclically from the I/O module.</p>

7.1.1.4.6 “Information” Menu Item

This area provides an overview of the specifications for the I/O module used. You obtain information about the following points:

- Article number
- Description
- Software version
- Hardware version

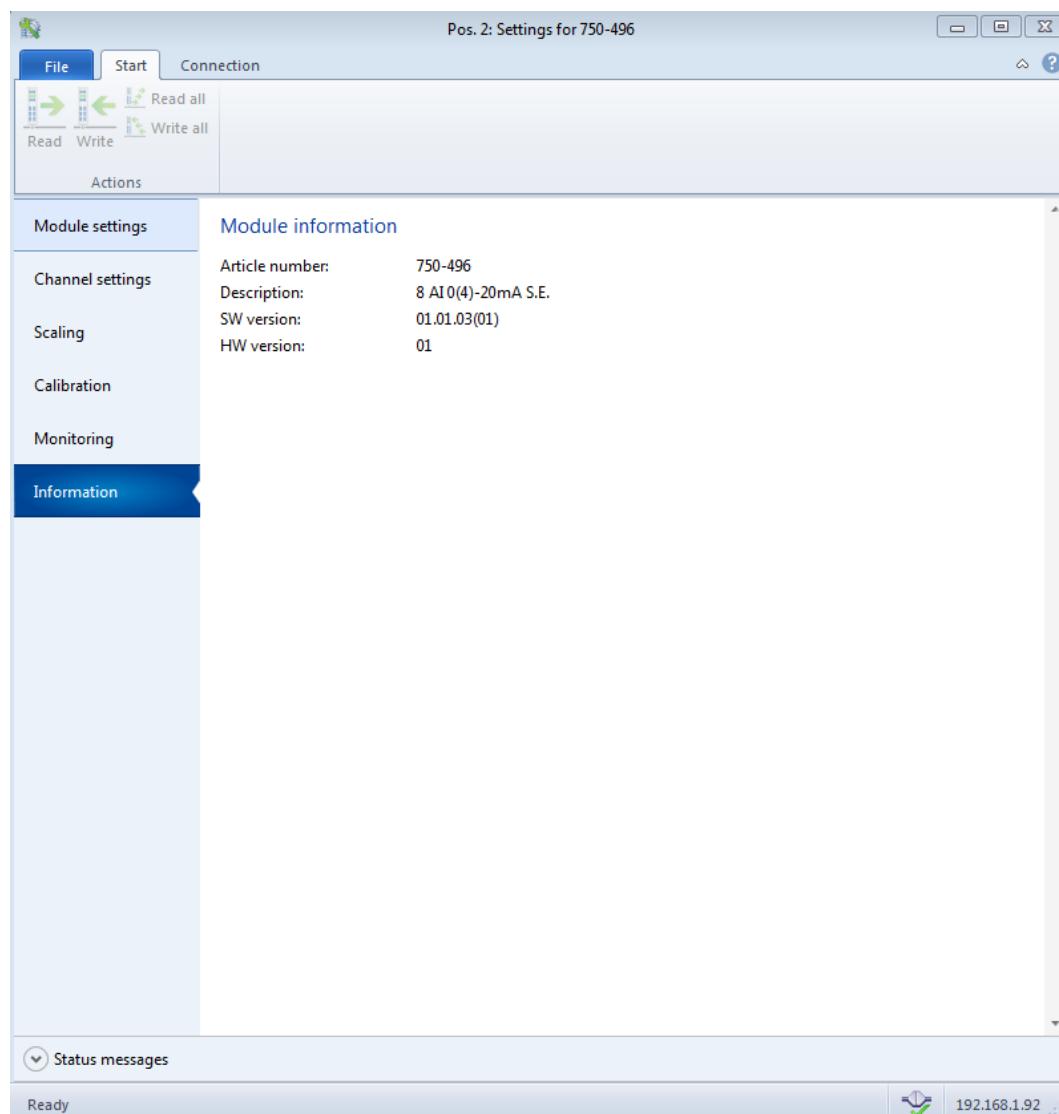Figure 27: **Information** Menu Item View

7.1.1.5 Application Area

Click one of the menu items in the vertical tab menu to call up the related parameterization options in the application area.

7.1.1.6 Status Messages



Note

Activate diagnostics!

Activate the diagnostics in the **Channel settings** menu item to receive status messages!

This area provides information about occurring diagnostics. If you have activated diagnostics in the **Channel settings** menu item and a diagnostic occurs, the diagnostic is displayed in the status messages window. These status messages are determined from the status bytes of the individual channels.

Click the button to expand the **Status Messages** window at the bottom of the parameterization dialog to display the status messages.



Figure 28: Expanding the Status Messages Window

The following status messages with corresponding additional information are displayed:

Table 32: Status Messages – Possible Status Messages with Additional Information

Status message	Error type	Channel	Status byte
Measurement range overflow	Warning	x	0x42
Measurement range underflow	Warning	x	0x41
User-defined limiting value overrange	Warning	x	0x04
User-defined limiting value underrange	Warning	x	0x08
Short circuit	Error	x	0x50
	Information	x	0x00
Wire break	Error	x	0x60
	Information	x	0x00
Channel deactivated	Information	x	0x00
Measured values in permissible range	Information	x	0x00

The status messages are displayed with assignment of the relevant I/O module channels.

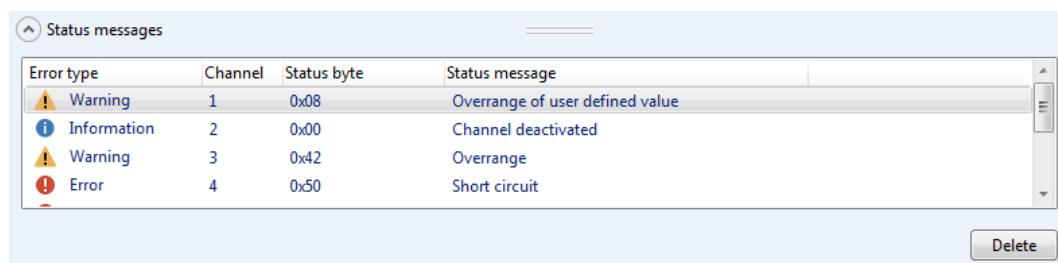


Figure 29: Status Messages in the Application Window of the Parameterization Dialog

Click the **[Delete]** button to clear the status message history. The history is automatically cleared if you interrupt the connection to the I/O module or close the parameterization dialog.

7.1.1.7 Status Bar

The following information is displayed in the status bar:

- Status indication with display of the currently executed action as text or the respective error message if an error occurs
- A progress bar is displayed as the actions are executed
- Online status
- IP address or COM interface




Figure 30: Status Bar in the Parameterization Dialog

7.2 Calibrating Measured Values

User calibration serves to compensate for tolerances in electrical components. Calibrate the I/O module by channel to achieve maximum measurement accuracy for each channel.



Note

User calibration by channel required!

Calibrate separately for each channel.

The following sensor types are specified:

Table 33: Sensor Types

ID	Sensor type
1	0 ... 20 mA
2	4 ... 20 mA
3	3.6 ... 21 mA (NAMUR NE43)

The variables in the following equations have the following meaning:

Table 34: Variable Legend – Calibrating Measured Values

Variable	Meaning/function
m	Calibration gain (gain factor)
b	Calibration offset (offset)
x1	Actual value 1 (analog input current)
x2	Actual value 2 (analog input current)
y1	Setpoint 1
y2	Setpoint 2

The “Gain” and “Offset” values are required to perform user-defined calibration. The calibration gain is the gain factor. The calibration offset is the offset on the y axis. The following general calibration equation applies:

$$y = (x + b) \times m$$

The general calibration equation yields the following two equations for calculating the two values sought:

$$\text{Calibration gain: } m = (y_2 - y_1) / (x_2 - x_1)$$

$$\text{Calibration offset: } b = (y_1 / m) - x_1$$

7.2.1 Example of Determining Gain and Offset

A two-point calibration method is used. Perform the following steps in WAGO-I/O-CHECK:

1. Select a sensor type.
In this example, sensor type 0 ... 20 mA (ID1) was selected.
2. Activate user calibration.
3. Set the value for the calibration offset to “0”.
4. Set the value for the calibration gain to “1”.
5. Apply a 24 kOhm resistor in series with a ammeter to an I/O module channel.
Read the current of the measurement device and I/O module.

Example:

Reference current 1 (y_1)= 0.9 mA
At 1 V is x_1 = 0.915 mA

6. Apply a second 1.1 kOhm resistor in series to the same I/O module channel.
Read the current of the measurement device and I/O module.

Example:

Reference current 2 (y_2)= 13.7 mA
At 9 V is x_2 = 13.8 mA

7. Insert all read values into the respective equations to obtain the values for the calibration gain and offset sought.

Example:

Calibration gain:

$$m = (y_2 - y_1) / (x_2 - x_1)$$
$$\rightarrow m = (13.7 \text{ mA} - 0.9 \text{ mA}) / (13.8 \text{ mA} - 0.915 \text{ mA}) = \underline{0.993}$$

Calibration offset:

$$b = (y_1 / m) - x_1$$
$$\rightarrow b = (0.9 \text{ mA} / 0.993) - 0.915 \text{ mA} = \underline{-0.008 \text{ mA}}$$

8. Enter the value calculated for calibration gain (0.993) in WAGO-I/O-CHECK.
9. Convert the result for the calibration offset from millamps to microamps.
10. Enter the value calculated for calibration offset in microamps ($-8 \mu\text{A}$) in WAGO-I/O-CHECK.

7.3 Scaling Measured Values

User scaling serves to adjust the process values. When user scaling is used, the required accuracy of the process value resolution is changed, but not fundamentally limited. User scaling is optional.

The values for “Gain” and “Offset” are required to perform user-defined scaling. The scaling gain is the gain factor. The scaling offset is the offset on the y axis. When these two values are input, a scaled process value is yielded as the result. The following general scaling equation applies:

- $y2 = y1 \times (\text{Gain} / 1024) + \text{Offset}$

The variables have the following meaning:

Table 35: Variable Legend – Scaling Measured Values

Variable	Meaning/function
y2	Scaled process value
y1	Unscaled process value
Gain	Scaling gain (gain factor)
Offset	Scaling offset (offset)
1024	Resolution 1/1024

The y1 value (unscaled process value) serves as the input value for the user scaling. With user scaling switched off, the y1 value is transferred unchanged to y2.

8 Diagnostics

8.1 I/O Module Behavior in the Event of an Error

The response of the I/O module if a diagnostic is present depends on the configuration for wire break monitoring, short circuit monitoring, underrange/overrange monitoring and upper/lower limiting value monitoring. You can activate or deactivate these diagnostics separately in WAGO-I/O-CHECK (see section “Startup” > ... > “Parameterization with WAGO-I/O-CHECK”).

The I/O module only allows one error to be indicated. A dedicated bit in the status byte is assigned to each error. The associated status bit is set if an error status is detected. Certain errors cause multiple error statuses to occur. This is why error statuses are given priority levels. In the event of several errors being present, the error with the highest priority will always be displayed.

The following priority levels apply:

Table 36: Priority levels of diagnostic functions

Priority level	diagnosis function
High	Short circuit
High	Wire break
Medium	Under-range
Medium	Over-range
Low	Violation of user-defined lower limit (user under-range)
Low	Violation of user-defined upper limit (user over-range)

Table 37: Behavior in the Event of an I/O Module Error Dependent on the Configuration

Configuration		I/O module behavior for wire break/short circuit	I/O module behavior for range violation
Wire break/short circuit monitoring	Underrange/over range monitoring		
OFF	OFF	Process value is saturated, no change in status byte, error LED off	Process value is saturated, no change in status byte, error LED off
OFF	ON	Process value is saturated, no change in status byte, error LED on	Process value is saturated, error bit (bit 0: Underrange or bit 1: Overrange) is set, general error (bit 6: General Error) is set, error LED ON
ON	OFF	Process value is saturated, error bit (bit 5: Wire Break or bit 6: Short Circuit) is set, general error (bit 6: General Error) is set, error LED ON	Process value is saturated, no change in status byte, error LED off
ON	ON	Process value is saturated, error bit (bit 5: Wire Break or bit 6: Short Circuit) is set, general error (bit 6: General Error) is set, error LED ON	Process value is saturated, error bit (bit 0: Underrange or bit 1: Overrange) is set, general error (bit 6: General Error) is set, error LED ON

The limiting values for detecting an underrange / overrange, a wire break, short circuit or a limiting value underrange / overrange and the output process values are specified in the process image tables (see section “Process Image”).

A general error signals a diagnosed error status. A general error is displayed if one or more of the error statuses named in this section occur or other internal error statuses for the I/O module are present. If there are any of the diagnostics for range violation, short circuit or wire break, the bit for general error is always set.



Note

Note how long diagnostics are displayed!

A diagnosed error status is displayed at least 100 ms even if the detected error status is no longer present in this period. If a higher-priority error status occurs in this period, the higher-priority error status is displayed for 100 ms and the lower-priority error status is lost.

9 Use in Hazardous Environments

The **WAGO-I/O-SYSTEM 750** (electrical equipment) is designed for use in Zone 2 hazardous areas.

The following sections include both the general identification of components (devices) and the installation regulations to be observed. The individual subsections of the “Installation Regulations” section must be taken into account if the I/O module has the required approval or is subject to the range of application of the ATEX directive.

9.1 Marking Configuration Examples

9.1.1 Marking for Europe According to ATEX and IEC-Ex

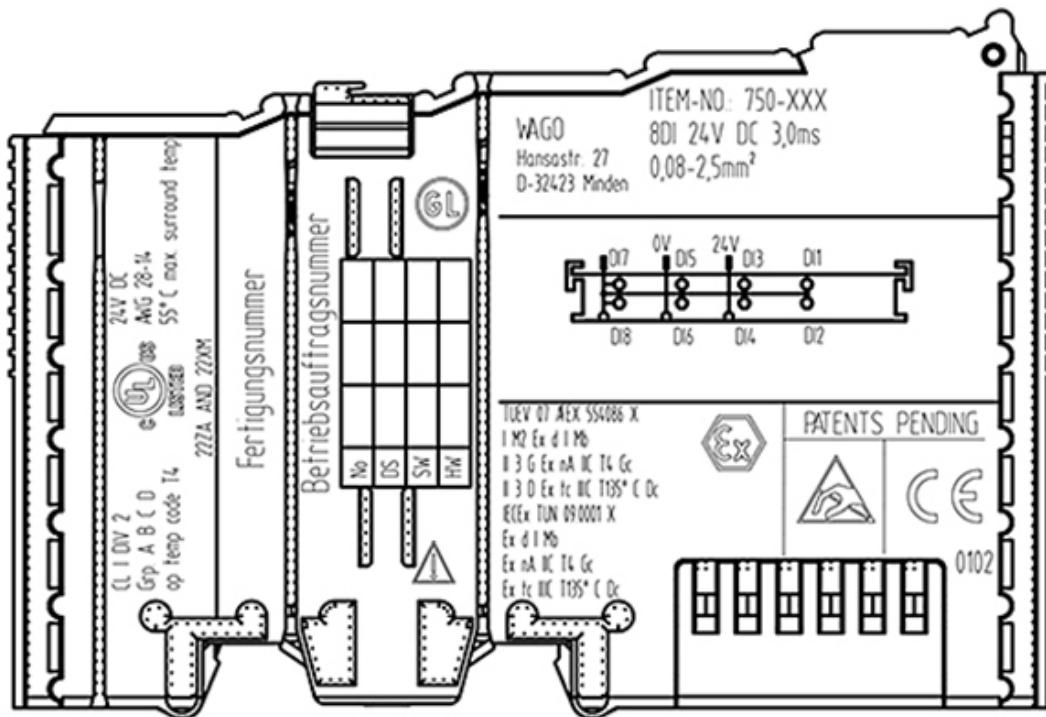


Figure 31: Side Marking Example for Approved I/O Modules According to ATEX and IECEEx

TUEV 07 ATEX 554086 X
 I M2 Ex d I Mb
 II 3 G Ex nA IIC T4 Gc
 II 3 D Ex tc IIC T135° C Dc
 IECEx TUN 09.0001 X
 Ex d I Mb
 Ex nA IIC T4 Gc
 Ex tc IIC T135° C Dc



Figure 32: Text Detail – Marking Example for Approved I/O Modules According to ATEX and IECEEx.

Table 38: Description of Marking Example for Approved I/O Modules According to ATEX and IECEx

Marking	Description
TÜV 07 ATEX 554086 X IECEx TUN 09.0001 X	Approving authority and certificate numbers
Dust	
II	Equipment group: All except mining
3D	Category 3 (Zone 22)
Ex	Explosion protection mark
tc Dc	Type of protection and equipment protection level (EPL):protection by enclosure
IIIC	Explosion group of dust
T 135°C	Max. surface temperature of the enclosure (without a dust layer)
Mining	
I	Equipment group: Mining
M2	Category: High level of protection
Ex	Explosion protection mark
d Mb	Type of protection and equipment protection level (EPL): Flameproof enclosure
I	Explosion group for electrical equipment for mines susceptible to firedamp
Gases	
II	Equipment group: All except mining
3G	Category 3 (Zone 2)
Ex	Explosion protection mark
nA Gc	Type of protection and equipment protection level (EPL): Non-sparking equipment
nC Gc	Type of protection and equipment protection level (EPL): Sparking apparatus with protected contacts. A device which is so constructed that the external atmosphere cannot gain access to the interior
IIC	Explosion group of gas and vapours
T4	Temperature class: Max. surface temperature 135°C

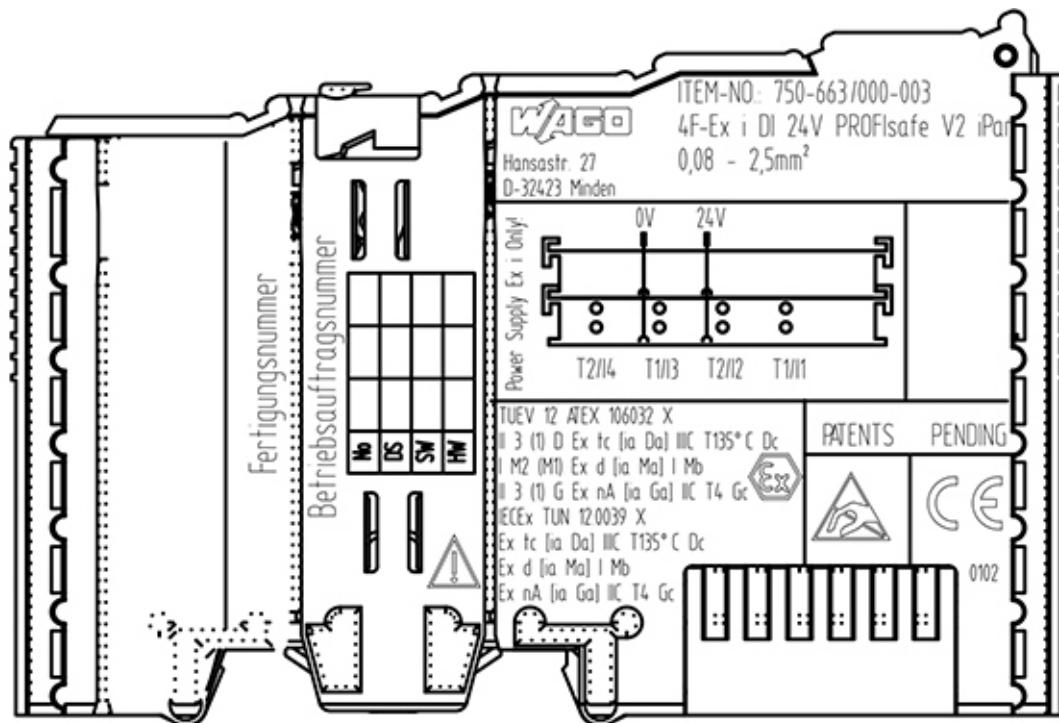


Figure 33: Side Marking Example for Approved Ex i I/O Modules According to ATEX and IECEEx.

TUEV 12 ATEX 106032 X
 II 3 (1) D Ex tc [ia Da] IIC T135° C Dc
 I M2 (M1) Ex d [ia Ma] I Mb
 II 3 (1) G Ex nA [ia Ga] IIC T4 Gc 
 IECEx TUN 12.0039 X
 Ex tc [ia Da] IIC T135° C Dc
 Ex d [ia Ma] I Mb
 Ex nA [ia Ga] IIC T4 Gc

Figure 34: Text Detail – Marking Example for Approved Ex i I/O Modules According to ATEX and IECEEx.

Table 39: Description of Marking Example for Approved Ex i I/O Modules According to ATEX and IECEx

Marking	Description
TÜV 07 ATEX 554086 X IECEx TUN 09.0001X	Approving authority and certificate numbers
TÜV 12 ATEX 106032 X IECEx TUN 12.0039 X	
Dust	
II	Equipment group: All except mining
3(1)D	Category 3 (Zone 22) equipment containing a safety device for a category 1 (Zone 20) equipment
3(2)D	Category 3 (Zone 22) equipment containing a safety device for a category 2 (Zone 21) equipment
Ex	Explosion protection mark
tc Dc	Type of protection and equipment protection level (EPL): protection by enclosure
[ia Da]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety circuits for use in Zone 20
[ib Db]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety circuits for use in Zone 21
IIIC	Explosion group of dust
T 135°C	Max. surface temperature of the enclosure (without a dust layer)
Mining	
I	Equipment Group: Mining
M2 (M1)	Category: High level of protection with electrical circuits which present a very high level of protection
Ex d Mb	Explosion protection mark with Type of protection and equipment protection level (EPL): Flameproof enclosure
[ia Ma]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety electrical circuits
I	Explosion group for electrical equipment for mines susceptible to firedamp

Table 39: Description of Marking Example for Approved Ex i I/O Modules According to ATEX and IECEEx

Gases	
II	Equipment group: All except mining
3(1)G	Category 3 (Zone 2) equipment containing a safety device for a category 1 (Zone 0) equipment
3(2)G	Category 3 (Zone 2) equipment containing a safety device for a category 2 (Zone 1) equipment
Ex	Explosion protection mark
nA Gc	Type of protection and equipment protection level (EPL): Non-sparking equipment
[ia Ga]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety circuits for use in Zone 0
[ia Gb]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety circuits for use in Zone 1
IIC	Explosion group of gas and vapours
T4	Temperature class: Max. surface temperature 135°C

9.1.2 Marking for America According to NEC 500

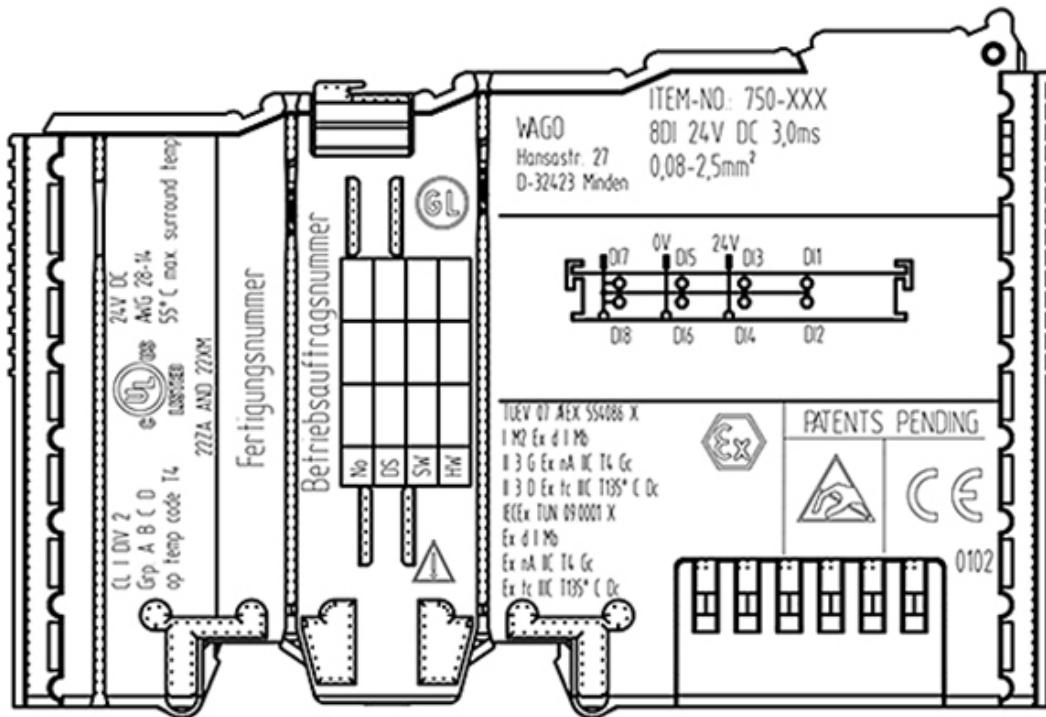


Figure 35: Side Marking Example for I/O Modules According to NEC 500

CL I DIV 2
Grp. A B C D
op temp code T4

22ZA AND 22XM

Figure 36: Text Detail – Marking Example for Approved I/O Modules According to NEC 500

Table 40: Description of Marking Example for Approved I/O Modules According to NEC 500

Marking	Description
CL I	Explosion protection group (condition of use category)
DIV 2	Area of application
Grp. ABCD	Explosion group (gas group)
Op temp code T4	Temperature class

9.2 Installation Regulations

For the installation and operation of electrical equipment in hazardous areas, the valid national and international rules and regulations which are applicable at the installation location must be carefully followed.

9.2.1 Special Notes Regarding Explosion Protection

The following warning notices are to be posted in the immediate proximity of the WAGO-I/O-SYSTEM 750 (hereinafter "product"):

WARNING – DO NOT REMOVE OR REPLACE FUSED WHILE ENERGIZED!

WARNING – DO NOT DISCONNECT WHILE ENERGIZED!

WARNING – ONLY DISCONNECT IN A NON-HAZARDOUS AREA!

Before using the components, check whether the intended application is permitted in accordance with the respective printing. Pay attention to any changes to the printing when replacing components.

The product is an open system. As such, the product must only be installed in appropriate enclosures or electrical operation rooms to which the following applies:

- Can only be opened using a tool or key
- Inside pollution degree 1 or 2
- In operation, internal air temperature within the range of $0^{\circ}\text{C} \leq \text{Ta} \leq +55^{\circ}\text{C}$ or $-20^{\circ}\text{C} \leq \text{Ta} \leq +60^{\circ}\text{C}$ for components with extension number .../025-xxx or $-40^{\circ}\text{C} \leq \text{Ta} \leq +70^{\circ}\text{C}$ for components with extension number .../040-xxx
- Minimum degree of protection: min. IP54 (acc. to EN/IEC 60529)
- For use in Zone 2 (Gc), compliance with the applicable requirements of the standards EN/IEC/ABNT NBR IEC 60079-0, -11, -15
- For use in Zone 22 (Dc), compliance with the applicable requirements of the standards EN/IEC/ABNT NBR IEC 60079-0, -11, -15 and -31
- For use in mining (Mb), minimum degree of protection IP64 (acc. EN/IEC 60529) and adequate protection acc. EN/IEC/ABNT NBR IEC 60079-0 and -1
- Depending on zoning and device category, correct installation and compliance with requirements must be assessed and certified by a "Notified Body" (ExNB) if necessary!

Explosive atmosphere occurring simultaneously with assembly, installation or repair work must be ruled out. Among other things, these include the following activities

- Insertion and removal of components
- Connecting or disconnecting from fieldbus, antenna, D-Sub, ETHERNET or USB connections, DVI ports, memory cards, configuration and programming interfaces in general and service interface in particular:
 - Operating DIP switches, coding switches or potentiometers
 - Replacing fuses

Wiring (connecting or disconnecting) of non-intrinsically safe circuits is only permitted in the following cases

- The circuit is disconnected from the power supply.
- The area is known to be non-hazardous.

Outside the device, suitable measures must be taken so that the rated voltage is not exceeded by more than 40 % due to transient faults (e.g., when powering the field supply).

Product components intended for intrinsically safe applications may only be powered by 750-606 or 750-625/000-001 bus supply modules.

Only field devices whose power supply corresponds to overvoltage category I or II may be connected to these components.

9.2.2 Special Notes Regarding ANSI/ISA Ex

For ANSI/ISA Ex acc. to UL File E198726, the following additional requirements apply:

- Use in Class I, Division 2, Group A, B, C, D or non-hazardous areas only
- ETHERNET connections are used exclusively for connecting to computer networks (LANs) and may not be connected to telephone networks or telecommunication cables
- **WARNING** – The radio receiver module 750-642 may only be used to connect to external antenna 758-910!
- **WARNING** – Product components with fuses must not be fitted into circuits subject to overloads!
These include, e.g., motor circuits.
- **WARNING** – When installing I/O module 750-538, “Control Drawing No. 750538” in the manual must be strictly observed!



Information

Additional Information

Proof of certification is available on request.

Also take note of the information given on the operating and assembly instructions.

The manual, containing these special conditions for safe use, must be readily available to the user.

10 Appendix

10.1 Configuration and Parameterization using a GSD File with PROFIBUS DP and PROFINET IO

10.1.1 Configuration 8 AI 0(4)-20 mA, S.E.

10.1.1.1 PROFIBUS DP Fieldbus Coupler/Controller 750-333(/0xx-000), 750-833(/0xx-000)

When using the aforementioned PROFIBUS DP fieldbus devices, the process image size is configured by selecting the corresponding GSD entry.

Table 41: Configuration PROFIBUS DP

GSD Entry		PI-Length/[byte]		Data Type	Inst.
Module	Submodule	I	O		
750-496 8AI/0/4-20mA/SE	n/a	16	n/a	INT16	8
750-496 8AI/0/4-20mA/SE RA		24	24	{UINT8, INT16}	
PFC 750-496 8AI/0/4-20mA/SE		n/a	n/a	n/a	n/a

10.1.1.2 PROFINET IO Fieldbus Coupler 750-370, 750-375(/025-000), 750-377(/025-000)

When using the aforementioned PROFINET IO fieldbus couplers, the process image size is configured by selecting the corresponding GSD entry.

Table 42: Configuration 750-370

GSD Entry		PI-Length/[byte]		Data Type	Inst.
Module	Submodule	I	O		
750-496 8AI, 0(4)-20 mA	n/a	16	n/a	INT16	8
750-496 8AI, 0(4)-20 mA, EM		24	24	{UINT8, INT16}	

Table 43: Configuration 750-375(/025-000), 750-377(/025-000)

GSD Entry		PI-Length/[byte]		Data Type	Inst.
Module	Submodule	I	O		
750-496 8AI, 0(4)-20 mA	INT16[8] I {UINT8, INT16}[8] I/O	16	n/a	INT16	8
		24	24	{UINT8, INT16}	

10.1.2 Parameterization 8 AI 0(4)-20 mA, S.E.

Apart from the user limits, the GSD file can be used to provide the I/O module on the PROFIBUS DP and PROFINET IO fieldbus coupler with all operating parameters.

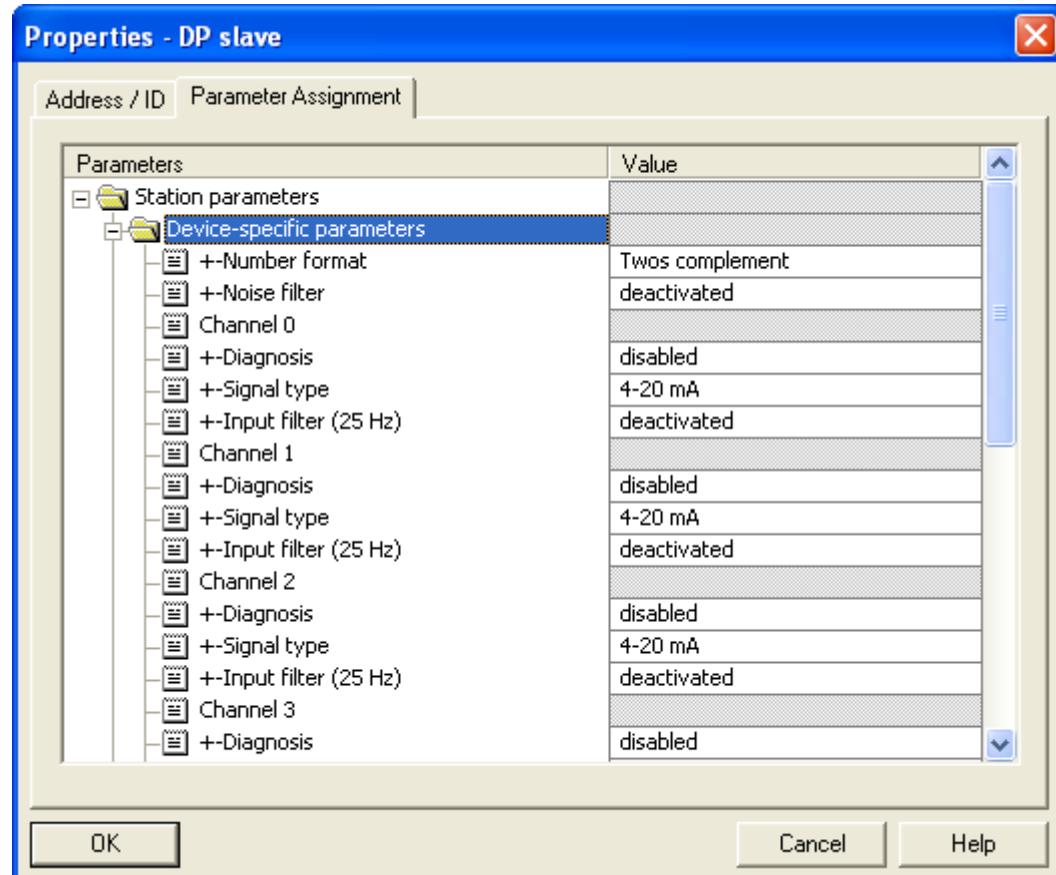


Figure 37: Example of the PROFIBUS DP fieldbus coupler parameterization dialog

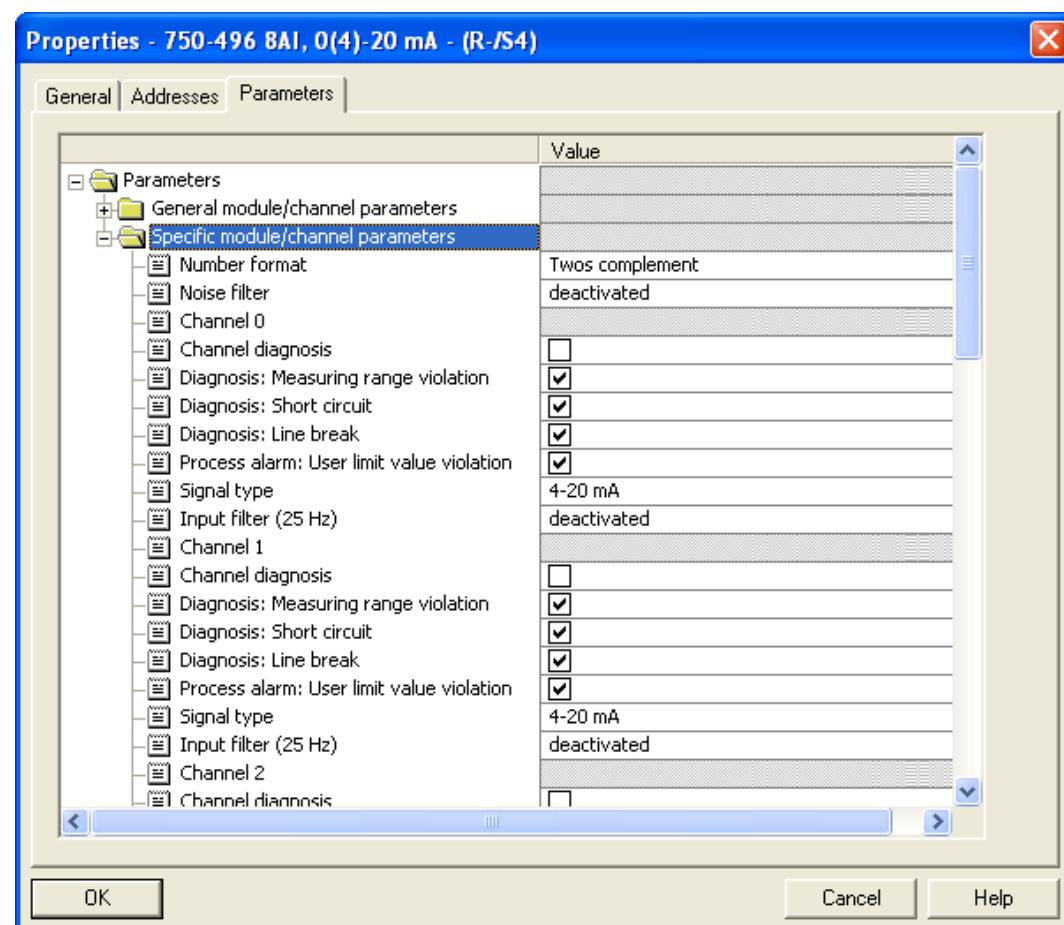


Figure 38: Example of the 750-370 fieldbus coupler parameterization dialog

For the PROFINET IO fieldbus couplers 750-375(/025-000) and 750-377(/025-000) the channel's user limits can be adjusted via GSD, too. On input values falling below or exceeding those limits, a respective process alarm will be issued.

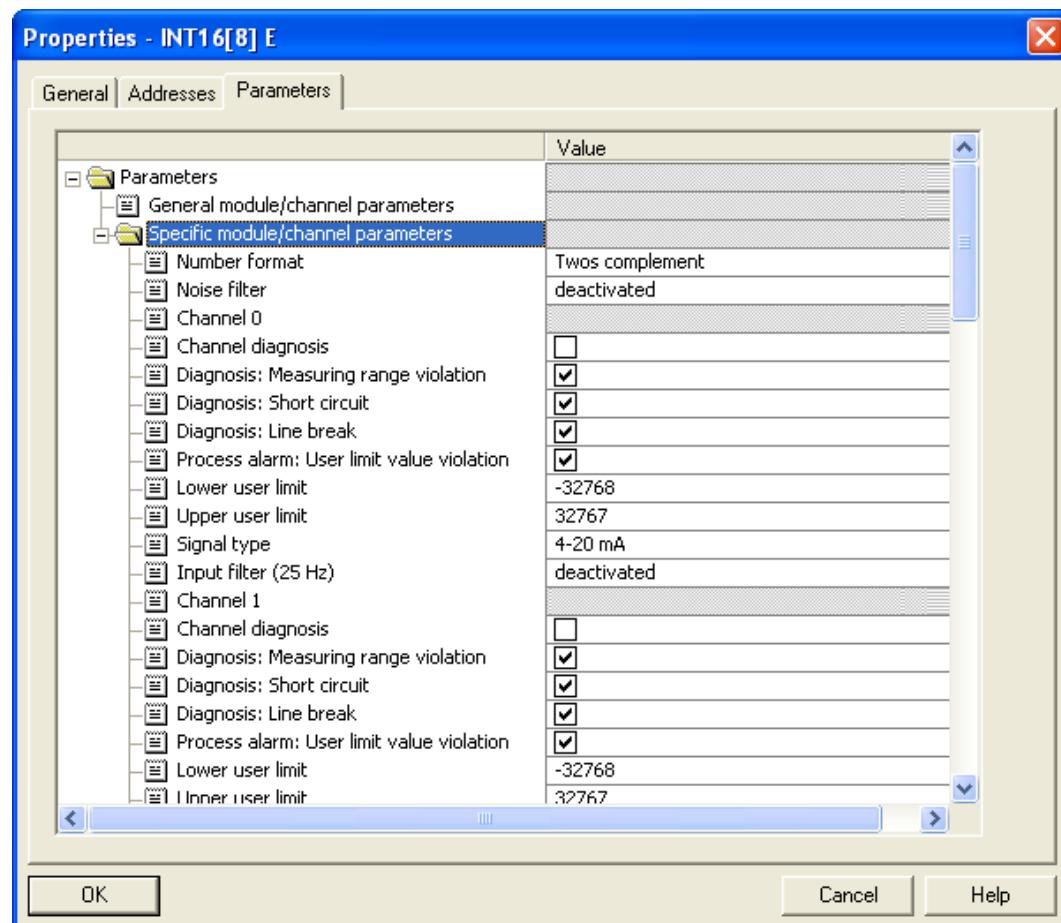


Figure 39: Example of the 750-375(/025-000) and 750-377(/025-000) fieldbus coupler parameterization dialog

10.1.2.1 All PROFIBUS DP and PROFINET IO Fieldbus Couplers

The following assignment applies to the parameters of the I/O module when using PROFIBUS DP and PROFINET IO fieldbus devices.

Table 44: Specific module / channel parameters for 750-496

GSD File		WAGO-I/O-CHECK	
Description	Value	Selection box	Value
Number format	Twos complement*)	Number format	Twos complement*)
	Sign magnitude		Sign magnitude
Noise filter	deactivated*)	Noise-Filter	Checkbox deactivated*)
	activated		activated
Signal type Channel x (x = 0...7)	deactivated	Signal type	deactivated
	0-20 mA		0-20 mA
	4-20 mA*)		4-20 mA*)
	3.6-21 mA (Namur NE43)		3.6-21 mA (Namur NE43)
Input filter (25 Hz) Kanal x (x = 0 ... 7)	deactivated*)	Input filter (25 Hz)	Checkbox deactivated*)
	activated		activated

*) Factory setting

10.1.2.2 PROFIBUS DP Fieldbus Coupler 750-333(/0xx-000), 750-833(/0xx-000)

The aforementioned fieldbus couplers allow module-specific parameterization of behavior at diagnosis.

Table 45: General module / channel parameters

Parameter	Value	Explanation
Diagnosis Channel x (x = 0 ... 7)	0 (disabled)*)	The fieldbus coupler signals a diagnosis if the I/O module reports the events: <ul style="list-style-type: none">• Measuring range overflow• Measuring range underflow Diagnostics reported by the I/O module do not lead to the signaling of a diagnosis by the fieldbus coupler.
	1 (enabled)	Diagnostics reported by the I/O module lead to the signaling of a diagnosis by the fieldbus coupler.

*) Factory setting

10.1.2.3 PROFINET IO Fieldbus Coupler 750-370, 750-375(/025-000), 750-377(/025-000)

The aforementioned fieldbus couplers allow module-specific parameterization of behavior at diagnosis.

Table 46: General module / channel parameters

Parameter	Value	Explanation
Channel diagnosis Channel x (x = 0 ... 7)	0 (false) ^{*)}	Any errors that may occur on the respective signal channel do not cause transmission of a diagnostic alarm nor entry in the diagnostics database of the station proxy.
	1 (true)	Any errors that may occur on the respective signal channel and the error type explicitly released entail transmission of a diagnostic alarm. The respective error leads to an entry in the diagnostics database of the station proxy.
Diagnosis: Measuring range underflow Channel x (x = 0 ... 7)	0 (false)	An undershot on the respective signal channel does not lead to transmission of a diagnostic alarm nor entry in the diagnostics database of the station proxy.
	1 (true) ^{*)}	Provided that the channel diagnostics of the respective signal channel has been activated, an undershoot leads to transmission of a diagnostic alarm and entry in the diagnostics database of the station proxy.
Diagnosis: Measuring range violation Channel x (x = 0 ... 7)	0 (false)	An violation on the respective signal channel does not lead to transmission of a diagnostic alarm nor entry in the diagnostics database of the station proxy.
	1 (true) ^{*)}	Provided that the channel diagnostics of the respective signal channel has been activated, an violation leads to transmission of a diagnostic alarm and entry in the diagnostics database of the station proxy.
Diagnosis: Short circuit Channel x (x = 0 ... 7)	0 (false)	A short circuit on the respective signal channel does not lead to transmission of a diagnostic alarm nor to entry in the diagnostics database of the station proxy.
	1 (true) ^{*)}	Provided that the channel diagnostics of the respective signal channel has been activated, a short circuit leads to transmission of a diagnostic alarm and entry in the diagnostics database of the station proxy.
Diagnosis: Wire break Channel x (x = 0 ... 7)	0 (false)	A wire break on the respective signal channel does not lead to transmission of a diagnostic alarm nor to entry in the diagnostics database of the station proxy.
	1 (true) ^{*)}	Provided that the channel diagnostics of the respective signal channel has been activated, a wire break leads to transmission of a diagnostic alarm and entry in the diagnostics database of the station proxy.

Table 46: General module / channel parameters

Parameter	Value	Explanation
Process alarm: User limit value violation Channel x (x = 0 ... 7)	0 (false)	Falling below the lower or above the upper user limit on the respective signal channel does not lead to transmission of a process alarm. The lower and upper user limits are set in another attribute.
	1 (true) ^{*)}	Provided that the channel diagnostics of the respective signal channel has been activated, falling below the lower or above the upper user limit leads to transmission of a process alarm. No entry in the diagnostics database of the station proxy is made. The lower and upper user limits are set in another attribute.
Lower user limit	-32768 ^{*)} ... 32767	Based on the value range of the input signal, a lower limit value of the input signal can be specified that can lead to the abovementioned event of a process alarm.
Upper user limit	-32768 ... 32767 ^{*)}	Based on the value range of the input signal, an upper limit value of the input signal can be specified that can lead to the abovementioned event of a process alarm.

^{*)} Factory setting

List of Figures

Figure 1: View	16
Figure 2: Data Contacts	17
Figure 3: Power Jumper Contacts	18
Figure 4: Push-in CAGE CLAMP® Connections	20
Figure 5: Display Elements	21
Figure 6: Schematic Diagram	23
Figure 7: Insert I/O Module (Example)	40
Figure 8: Snap the I/O Module into Place (Example)	40
Figure 9: Removing the I/O Module (Example)	41
Figure 10: Connecting a Conductor to a Push-in CAGE CLAMP®	42
Figure 11: Connection example – 2-Wire	43
Figure 12: WAGO-I/O-CHECK user interface	45
Figure 13: Parameterization Dialog for the I/O Module 750-496	46
Figure 14: Title Bar in the Parameterization Dialog	47
Figure 15: Horizontal Tab Menu	48
Figure 16: Buttons in the Application Menu	48
Figure 17: Contents of the Horizontal Tab Start	50
Figure 18: Start > Main Menu > Channel Selection List	51
Figure 19: Connection Tab for Disconnected I/O Module	51
Figure 20: Connection Tab for Connected I/O Module	51
Figure 21: Overview of the Vertical Tab Menu	52
Figure 22: Module settings Menu Item View	53
Figure 23: Channel settings Menu Item View	55
Figure 24: Scaling Menu Item View	57
Figure 25: Calibration Menu Item View	59
Figure 26: Monitoring Menu Item View	61
Figure 27: Information Menu Item View	63
Figure 28: Expanding the Status Messages Window	64
Figure 29: Status Messages in the Application Window of the Parameterization Dialog	64
Figure 30: Status Bar in the Parameterization Dialog	65
Figure 31: Side Marking Example for Approved I/O Modules According to ATEX and IECEx	72
Figure 32: Text Detail – Marking Example for Approved I/O Modules According to ATEX and IECEx	72
Figure 33: Side Marking Example for Approved Ex i I/O Modules According to ATEX and IECEx	74
Figure 34: Text Detail – Marking Example for Approved Ex i I/O Modules According to ATEX and IECEx	74
Figure 35: Side Marking Example for I/O Modules According to NEC 500	77
Figure 36: Text Detail – Marking Example for Approved I/O Modules According to NEC 500	77
Figure 37: Example of the PROFIBUS DP fieldbus coupler parameterization dialog	82
Figure 38: Example of the 750-370 fieldbus coupler parameterization dialog	83
Figure 39: Example of the 750-375(/025-000) and 750-377(/025-000) fieldbus coupler parameterization dialog	84

List of Tables

Table 1: Revision History.....	6
Table 2: Number Notation.....	9
Table 3: Font Conventions	9
Table 4: Compatibility List 750-496	15
Table 5: Legend for Figure “View”	16
Table 6: Legend for Figure “Power Jumper Contacts”	18
Table 7: Legend for the “Push-in CAGE CLAMP® Connections” Figure – 8- Channel, 2-Wire.....	20
Table 8 Legend for the “Display Elements” Figure	21
Table 9: Technical Data – Device	24
Table 10: Technical Data, Power Supply	24
Table 11: Technical Data – Communication.....	24
Table 12: Technical Data – Inputs	25
Table 13: Technical Data – Field Wiring.....	25
Table 14: Technical Data – Power Jumper Contacts	25
Table 15: Technical Data – Data Contacts	26
Table 16: Technical Data – Climatic Environmental Conditions	26
Table 17: Process Image – I/O Module 750-496	31
Table 18: Status Byte CH1_S0.....	32
Table 19: Process Image, Sensor Type 0-20 mA, Two's Complement Representation.....	33
Table 20: Process Image, Sensor Type 4 ... 20 mA, Two's Complement Representation.....	34
Table 21: Process Image, Sensor Type 3.6 ... 21 mA (NAMUR NE43), Two's Complement Representation.....	35
Table 22: Process Image, Sensor Type 0 ... 20 mA, Amount/Sign Format	36
Table 23: Process Image, Sensor Type 4 ... 20 mA, Amount/Sign Format	37
Table 24: Process Image, Sensor Type 3.6 ... 21 mA (NAMUR NE43), Amount/Sign Format	38
Table 25: buttons on the main menu	47
Table 26: Buttons in the application menu.....	49
Table 27: Module settings Menu Item	54
Table 28: Channel settings Menu Item.....	55
Table 29: Scaling Menu Item.....	58
Table 30: Calibration Menu Item	60
Table 31: Monitoring Menu Item.....	62
Table 32: Status Messages – Possible Status Messages with Additional Information	64
Table 33: Sensor Types	66
Table 34: Variable Legend – Calibrating Measured Values	66
Table 35: Variable Legend – Scaling Measured Values	68
Table 36: Priority levels of diagnostic functions.....	69
Table 37: Behavior in the Event of an I/O Module Error Dependent on the Configuration	70
Table 38: Description of Marking Example for Approved I/O Modules According to ATEX and IECEx	73

Table 39: Description of Marking Example for Approved Ex i I/O Modules According to ATEX and IECEx	75
Table 40: Description of Marking Example for Approved I/O Modules According to NEC 500.....	77
Table 41: Configuration PROFIBUS DP	81
Table 42: Configuration 750-370	81
Table 43: Configuration 750-375(/025-000), 750-377(/025-000)	81
Table 44: Specific module / channel parameters for 750-496.....	85
Table 45: General module / channel parameters	85
Table 46: General module / channel parameters	86

WE! INNOVATE!

WAGO Kontakttechnik GmbH & Co. KG
Postfach 2880 • D-32385 Minden
Hansastraße 27 • D-32423 Minden
Phone: 05 71/8 87 – 0
Fax: 05 71/8 87 – 1 69
E-Mail: info@wago.com
Internet: <http://www.wago.com>

